



SHINING 3D

EinScan SE & SP User Manual



V3.1.4.3

Table of contents

1. Specification and System Requirements	2
1.1. Recommended System Configuration	3
1.2. Hardware Installation	3
2. Set Software	7
2.1. Download the Software	7
2.2. Install the Software	7
2.3. Update the Software	8
2.4. Activate the Scanner	9
2.5. Interface and Parameters	11
3. Calibrate the Scanner	16
3.1. Precautions and Use	17
3.2. Operation	17
4. Before Scanning	22
4.1. Object	22
4.2. Preparation	22
5. Scan	23
5.1. Before Scanning	24
5.2. Turntable	25
5.3. Scan	29
6. Project Group	31
6.1. Create/Import Projects	32
6.2. Current Projects	32
6.3. Rename a Project	32
6.4. Remove/Delete	33
6.5. Create/Split a Group	34
6.6. Edit Data	34
6.7. Alignment	35
7. Mesh	37
7.1. Create Mesh (Watertight/Unwatertight)	37
7.2. Edit Mesh	38
7.3. Fill Holes	39
7.4. Sharpen	39
7.5. Smooth	40
7.6. Simplify	41
7.7. Zoom	41
7.8. Remap Texture	42
8. Export Data	43
8.1. Data Formats	44
8.2. Measurement	45

9. Share Data	51
10. Third-party Software	51
11. Preview Model	53
12. Others	54
12.1. FAQ	54
12.2. Safety Precautions	54
13. Support and Contact	54
13.1. Submit a Ticket	55
13.2. Contact Us	56

1. Specification and System Requirements

1.1. Recommended System Configuration

Preparing a suitable computer will improve your scanning experience.

<i>Handheld model</i>	EinScan SE /SP	
	Recommended	
<i>Operating System</i>	Windows 10/11, 64-bit	
<i>Interface</i>	at least one 3.0 port	
<i>Graphics Memory</i>	$\geq 2\text{ G}$	
<i>RAM</i>	$\geq 16\text{ G}$	
<i>Processor</i>	Intel® Core™ I5 or above	
<i>Graphic Card</i>	Independent Graphic Card, NVIDIA GTX 660 or above	
<i>Screen resolution</i>	1920*1080	DPI: 100%; 125%
	3840*2160	DPI: 100%; 200%

➤ RECOMMENDED PC MODEL (only for reference)

Dell G3 laptops, Core i7-9750H, NVIDIA GeForce RTX 2060 6GB GDDR6, 2x8GB, DDR4, 2666MHz

Asus ZenBook Flip, Core i7, Nvidia MX250 with 2Gb memory, solid state hard drive, 16gb ram

Lenovo Y520 15IKBM i7-7700hq, 16GB, GTX 1060

Acer Predator PH317 i7, GTX1060, 16G RAM

MSI – GS63VR 7RF stealth pro RAM 32G

Alien ALW15M-R2726R

ASUS ROG STRIX


1.2. Hardware Installation

Unpack and set up your scanner and software before getting started with scanning.

1.2.1. Set the Scanner


- Step 1. Insert calibration board onto the board holder.

NOTE: Rotate the calibration board only while calibration.

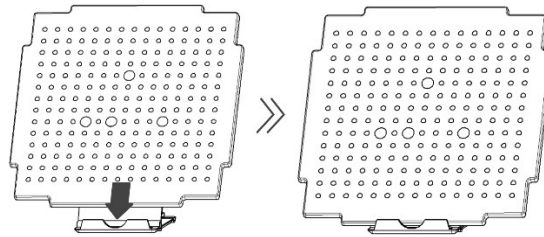


- Step 2-1. Turntable and Scanner installation.


1) Screw the bracket into the socket on the stand.

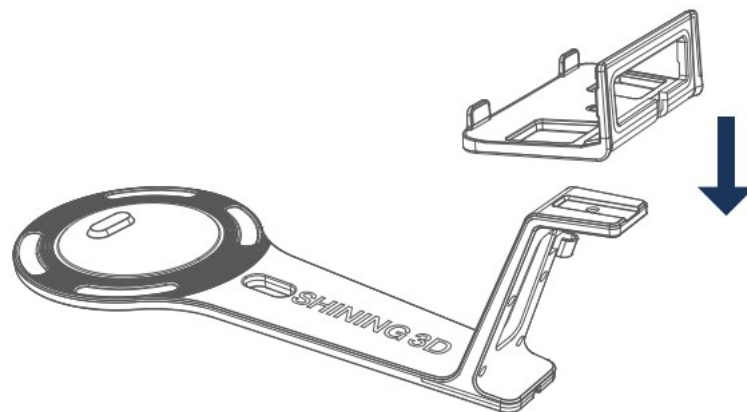


2) Place the turntable onto scanner stand.

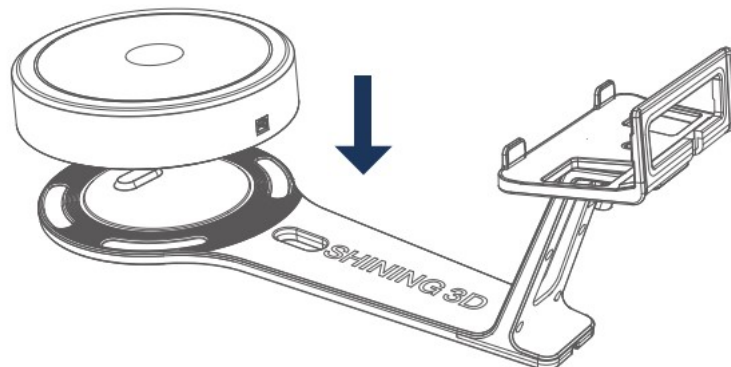


3) Place the scanner head onto the bracket.

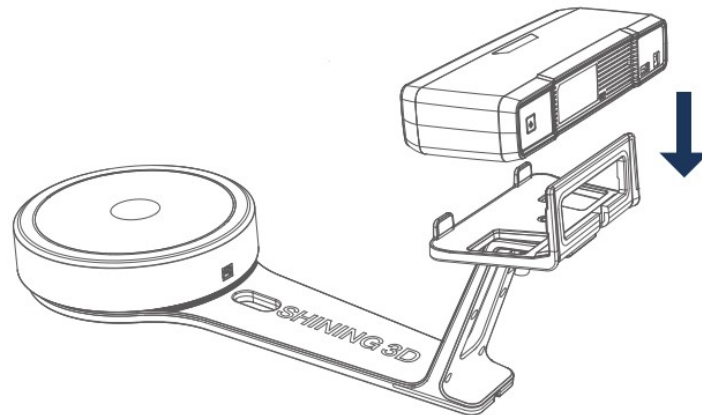


4) Place the scanner head at a certain angle of inclination fixed to the bracket.

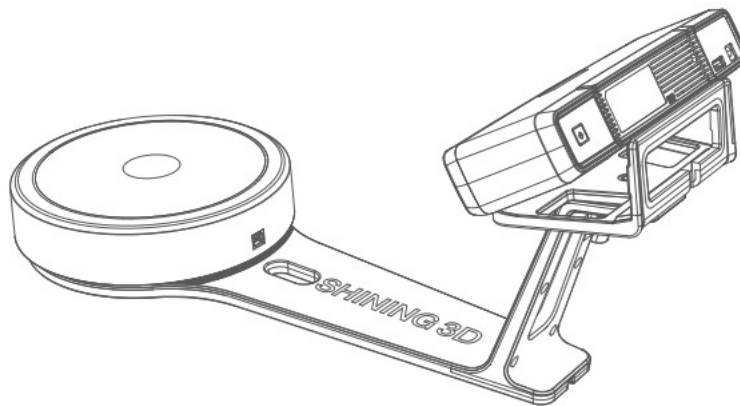


5) Place the scanner head fixed to the bracket.

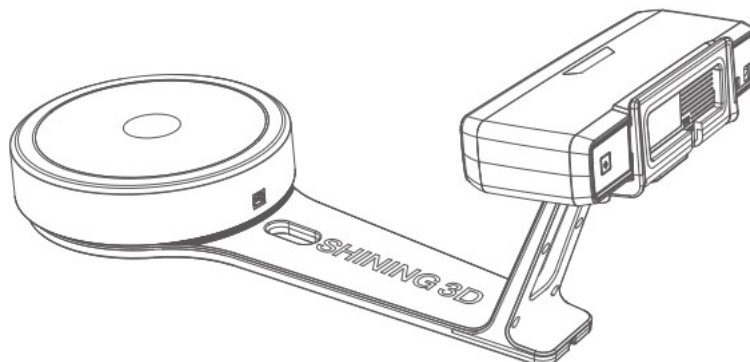

6) Plug USB cable into back of scanner, and turntable.

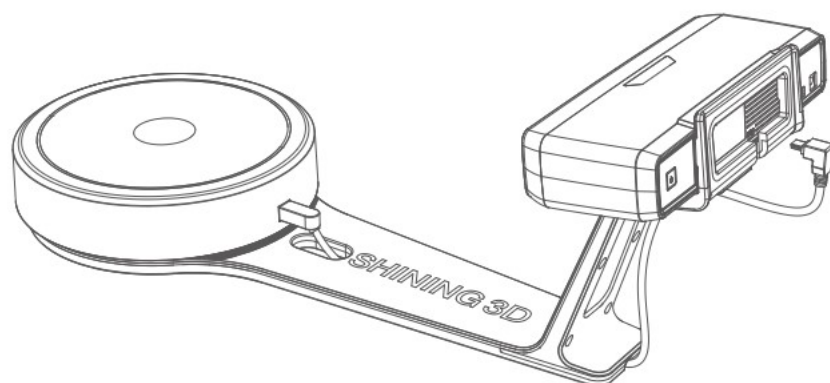


7) Plug power cord into outlet and the back of scanner; Plug USB cable into back of scanner and computer USB port; Plug USB cable into back of scanner, and turntable.

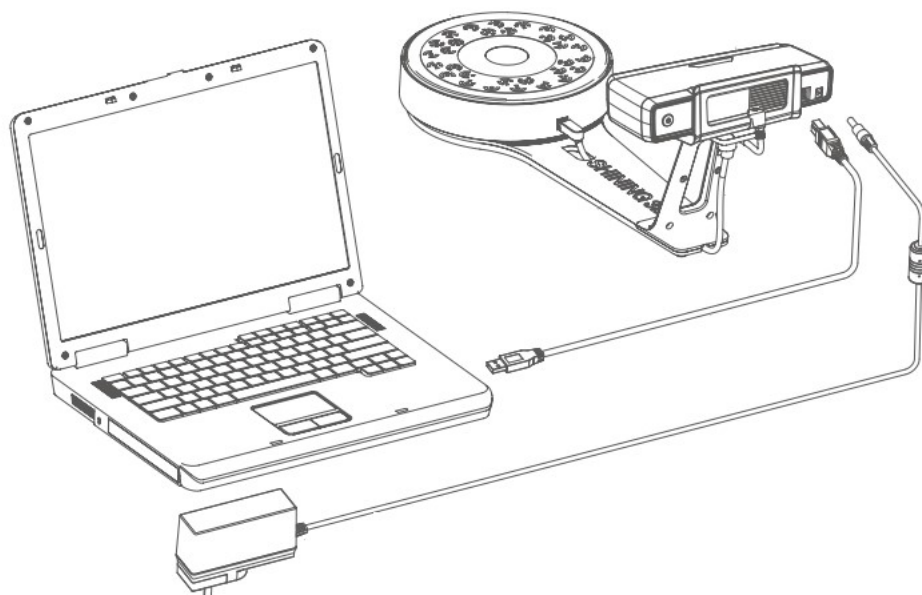

1.2.2. Turn on/off the Scanner

Device Model	EinScan SE V2 & EinScan SP V2	EinScan SE & EinScan SP
Operation	<ul style="list-style-type: none"> ● Press the power button to turn scanner on. ● press again, then turn scanner off. 	<ul style="list-style-type: none"> ● Power on: Touch for about half a second. ● Power off: Touch for half a second first, then touch again after half a second for another half a second.

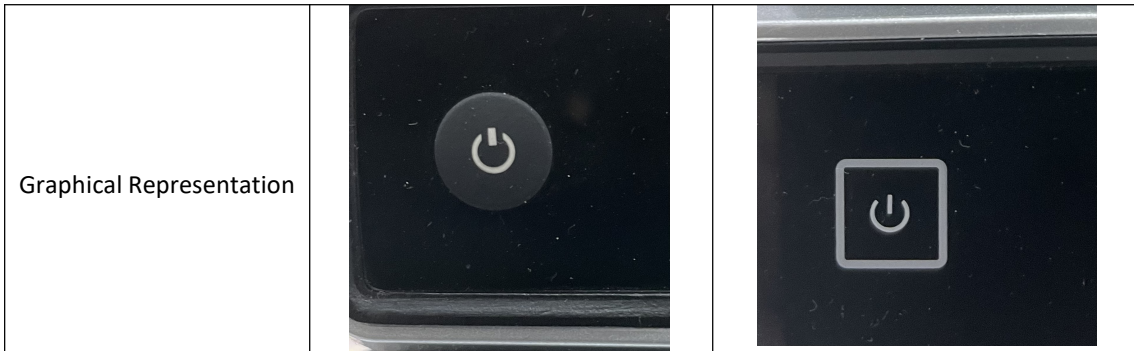

Note:

- Do not stare at operating lamp. May be harmful to the eyes. Please keep away from the lamp head, at least 30cm away.
- This equipment is not intended for use by children.

2. Set Software

2.1. Download the Software

Step 1: Go to <https://www.einscan.com/support/download/>.

Step 2: Select your scanner model.


Step 3: Download the software to your operating computer.

Note: You are required to register before downloading.

2.2. Install the Software

Note before installation: Administrator rights are required for the installation of the software only.

1. Double click installation package, accept the modification on your computer.
2. Follow the instructions to complete the software installation.




After the software is installed, a shortcut will be created on your desktop. Double click to open the software.

2.3. Update the Software

2.3.1 Software Update

When a new version is available, a pop-up will show when you start the software to remind you update your software to the latest version.

- Click **Yes** to update.

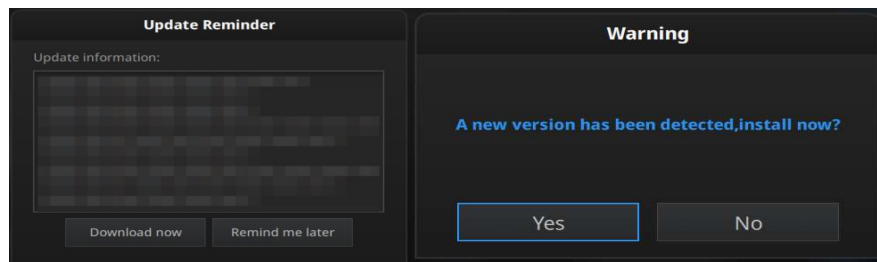


Update Reminder


2.3.2 Firmware Update

To get a better scan result or to fix issues, the latest firmware version will be released at irregular intervals.

When you open the software, it will automatically detect the firmware version. If the firmware doesn't match the software, a message will pop out to prompt you to upgrade the firmware.

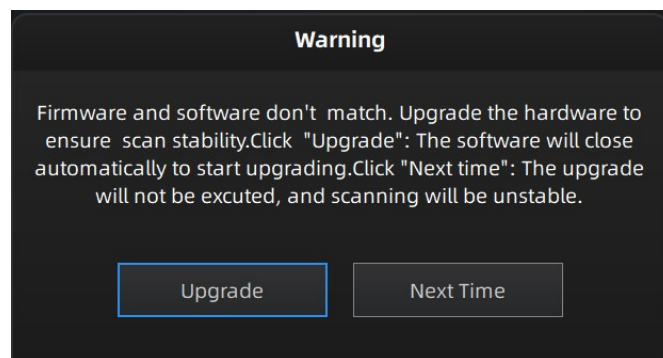

Click Upgrade to update the firmware. Make sure that the device is powered on during the upgrade; avoid interruption of the upgrade due to power cuts.

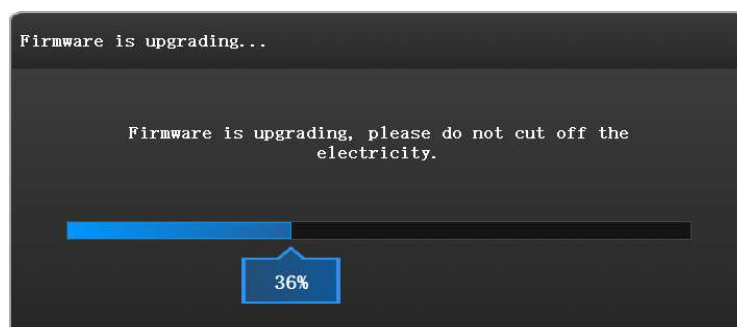


2.4. Activate the Scanner

You need a SHINING 3D User Account before activating the device.

2.4.1. Registration

For the new user, register a SHINING 3D User Account is the first step. Click Register in the pop-up window when launching the software, or click Sign Up in the SHINING 3D User Account website:
<https://passport.shining3d.com/login?redirect=%2F>

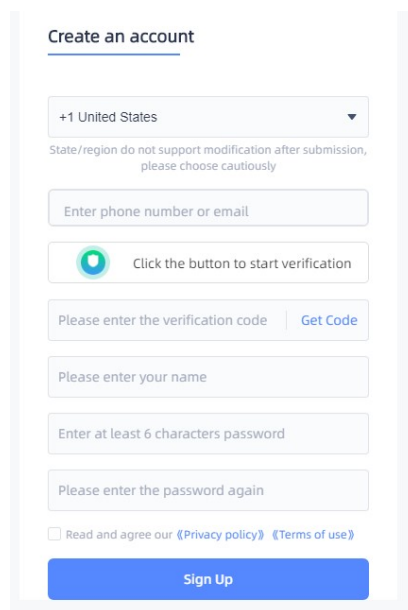

The registration form is titled "Create an account" and is enclosed in a light gray border. It contains the following fields and elements from top to bottom: a country dropdown menu set to "+1 United States" with a note below it stating "State/region do not support modification after submission, please choose cautiously"; a text input field for "Enter phone number or email"; a button with a circular icon and the text "Click the button to start verification"; a text input field for "Please enter the verification code" next to a blue "Get Code" link; a text input field for "Please enter your name"; a text input field for "Enter at least 6 characters password"; another text input field for "Please enter the password again"; a checkbox for "Read and agree our" followed by links to "Privacy policy" and "Terms of use"; and a large blue "Sign Up" button at the bottom.



Registration

2.4.2. Login

Log in SHINING 3D User Account when launching the software.

If your computer failed to connect to the network:

- Check the network connection and click **Refresh** to reconnect to the network. It will jump back to the login interface after connecting to the network successfully.
- If your computer can not connect to the network successfully, click **offline activation** to perform the offline activation.

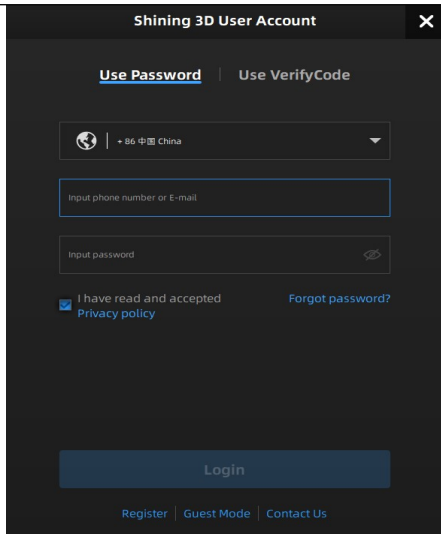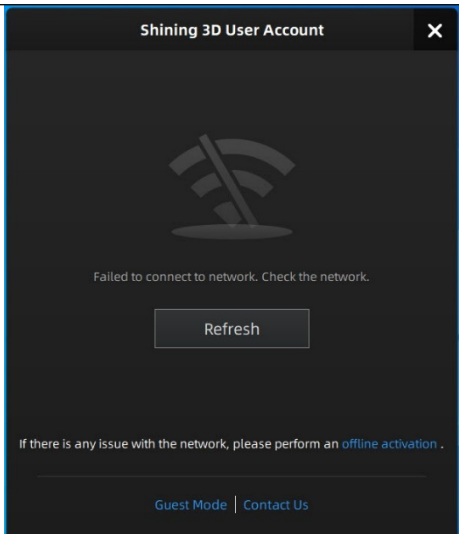	
<i>User Account</i>	<i>Network Not Available</i>

2.4.3. Activation

Online activation


If the computer is connected to the Internet, the activation will be processed automatically when you log in the SHINING 3D User Account.

Offline activation

You need another computer which is connected to Internet to help you finish the offline activation.


Steps:

1. Click offline activation to enter the activation wizard.
2. Choose the corresponding device: EinScan SE/EinScan SP.
3. Connect the scanner to the computer that is not connected to the Internet and export the C2V file.

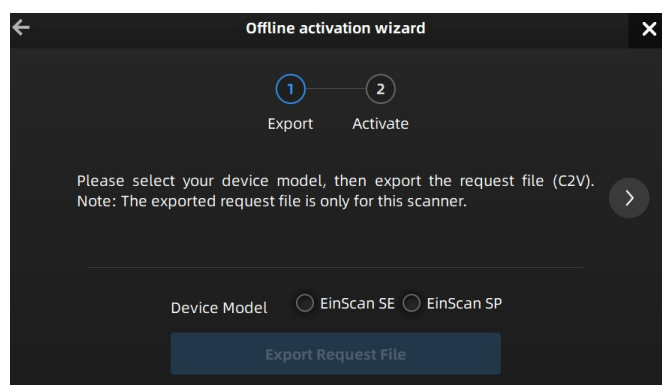

Export

4. Copy the C2V file to the other computer which is connected to Internet.
5. On the computer with network, log in <https://passport.shining3d.com/login?redirect=%2F>. Upload your C2V file on the **offline activation** page, fill in the information and then click **Activate** to go to download page.
6. Copy the V2C file to the computer that is not connected to the Internet and import the file.

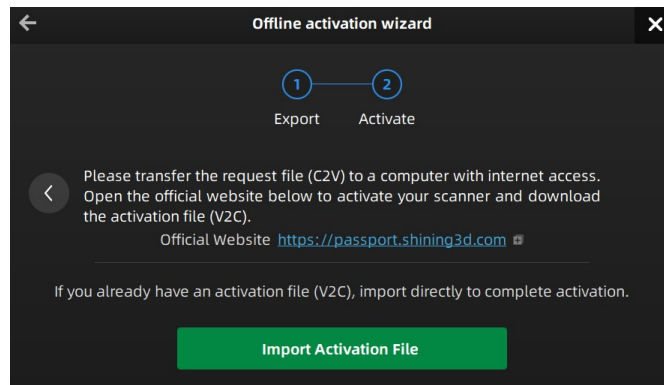

Import


When installing the Discovery Pack, import or download the pack license (.encode) according to the interface guidance.

Note: If you fail to activate the device, please contact your supplier or our support team(<https://support.einscan.com/>).

2.5. Interface and Parameters

2.5.1. Navigation

Discovery mode is only available for EinScan SE & EinScan SP.

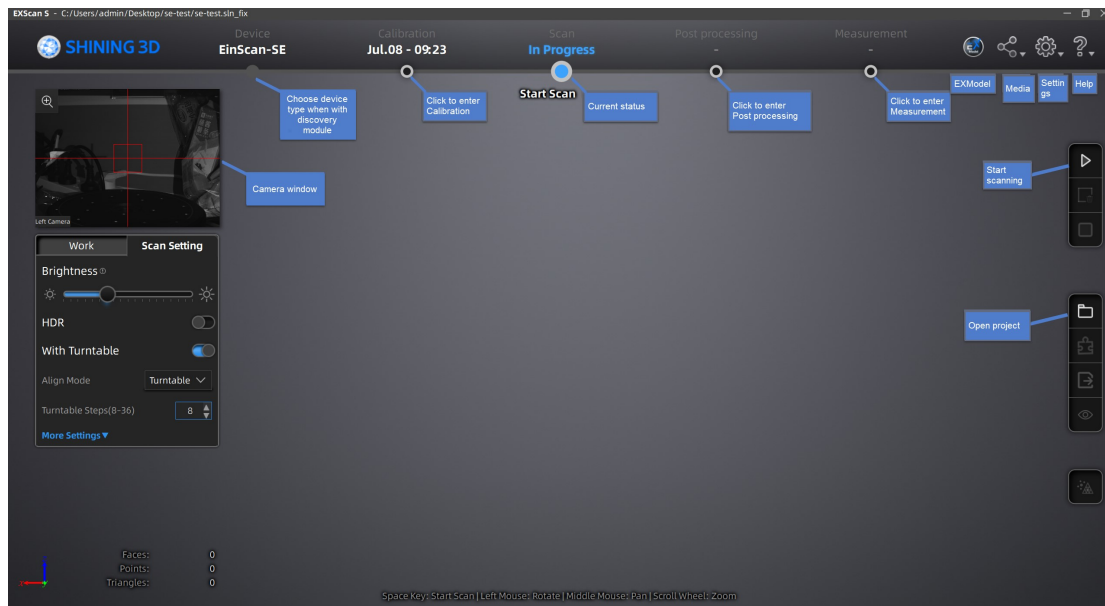


Interface navigation







Left mouse: rotate

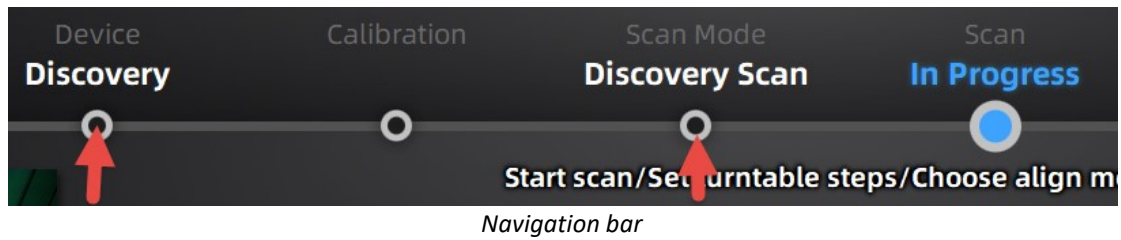Middle mouse: move the data

Scroll up and down: zoom in or out


Navigate between different menu by click on the circle. Choose different scan modes if Discovery Pack is connected.



- **Device:** To display the device status: online / offline. Device online: to show the device name.
Device offline: click  to reconnect the device.
- **Calibration:** Click  on the corresponding position in the navigation bar to start calibration.
- **Scan:** Click  on the corresponding position in the navigation bar to start scanning.
- **Post-Processing:** Once the scanning is completed and the point cloud is generated, click  to enter the post-processing workflow. You can mesh the model, and then proceed with mesh editing. You can also click  on the corresponding position in the navigation bar to switch to the post-process interface to perform mesh editing on the mesh data.
- **Measurement:** Click  on the corresponding position in the navigation bar to switch to measure interface.

2.5.2. Reconnect the Scanner

When the device is offline, meaning the scanner is not connected to PC, please check the connection and restart the software.

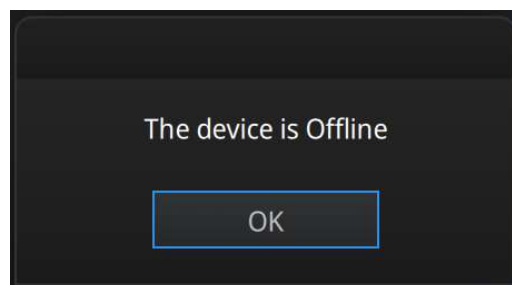



Device offline or connection loose

2.5.3. EXModel

View the relevant information for EXModel and our technical support contact.

If you have not installed the EXModel, click  in the top-right corner and choose the corresponding version on the pop-up window to get it.

If you have installed the EXModel, click  to directly switch to it.

If you have installed the EXModel and you are in the post-processing or measurement interface with mesh data, click  to switch to the EXModel and import the data into it; if there is no mesh data, clicking this button will only switch to the EXModel.

[Click here to download and learn how to activate EXModel.](#)
[Click here to learn how can I get access to EXModel.](#)

2.5.4. Settings



Click the settings logo from the upper right to open the drop down menu.

2.5.3.1 User Experience

To help us improve the quality and user experience of EinScan scanners, we hope to be allowed to collect usage experience information. This information will not contain your personal information or scanned data, and will not be accessible to any third party. This checkbox is selected by default, and we strongly recommend you keep it checked. As a reward, the User Experience Enhancement Program will continuously keep you informed with the newest software update information, to assure you get free software updates and enjoy the latest improvements based on your collective feedback. If you close the User Experience Enhancement Program, you might not be informed with software updates automatically.

2.5.3.2 Privacy Policy

Before using our products or services, please be sure to carefully read and fully understand our Privacy Policy. Only proceed to use the relevant products or services if you fully understand and agree to the policy.

2.5.3.3 Factory Default

All settings modifications will go back to the original settings.

2.5.3.4 Language

Select the language for the interface, click apply to change, restarting the software is not needed.


2.5.3.5 About

For version information and support, email einscan_support@shining3d.com.

2.5.5. Help Mode


Open Help Mode

Click the question mark in the upper right bar, and open the help mode from the drop-down menu.

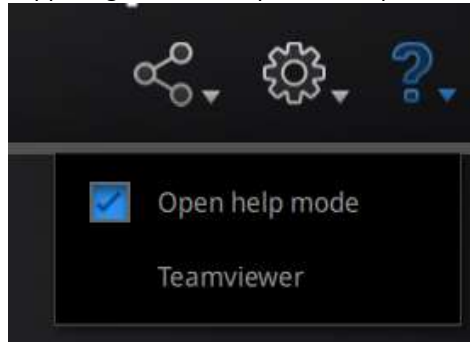

Drop down menu


Display the help tool related to the current interface.

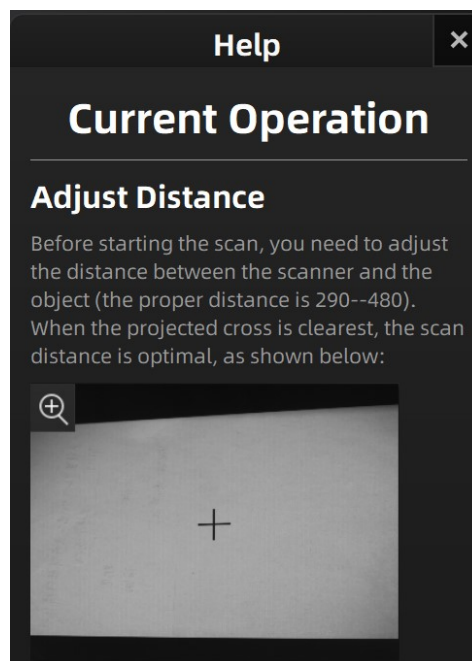

Help window

Teamviewer

It opens S3D_teamviewer.exe, for online customer support access or display to other screen or portable screen. Share your ID and password to allow our technicians to remote control of your computer during online technical support

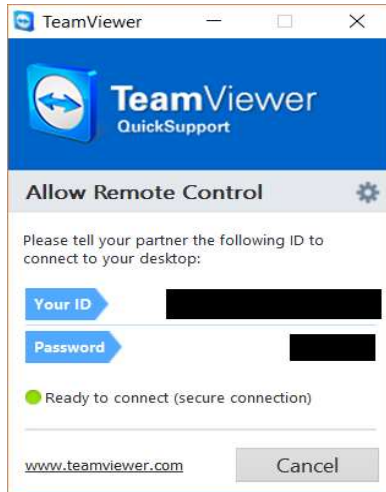

Share the Your ID and password to allow access

2.5.6. Alerts

A pop-up alert will notify the user of a hardware or configuration issue. Check and restart the software. If the error persists, please contact support by emailing einscan_support@shining3d.com.

Fail to activate


For activation failure, make sure the scanner is well connected. Redo the activation.




Device fails to activate

Incorrect configuration

try another USB port and update your graphics card drivers and restart the software.

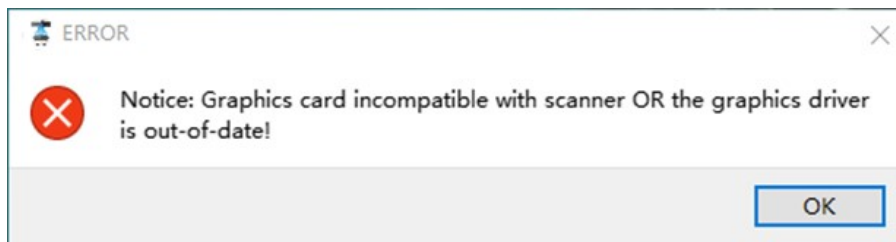


Graphics card incompatible

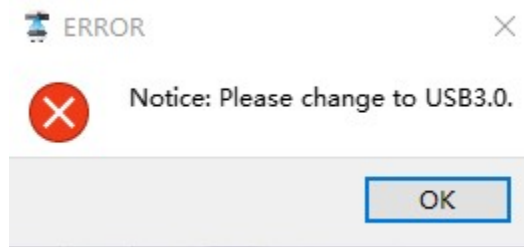


USB not 3.0

If the computer has multiple graphic card, access to the NVIDIA Control Panel (right click on the desktop). In Manage 3D Settings > Program Settings, Add EXScan S software. Then change the preferred graphic processor for this program. Select NVIDIA processor. Click Apply to save the settings.

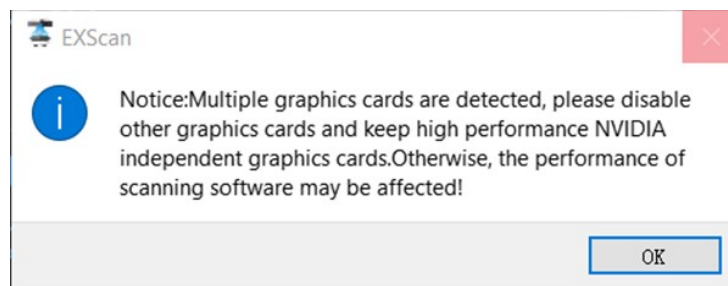

Multiple graphic card detected

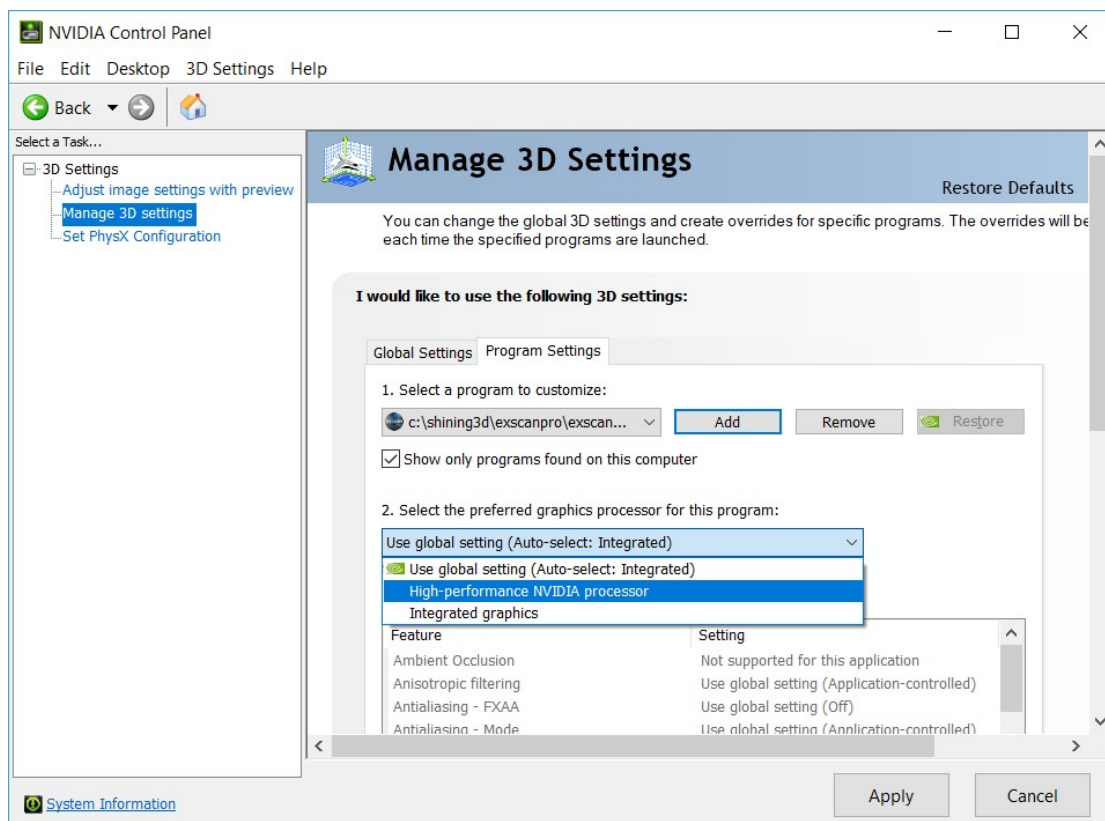

Change graphic card preferences for EXScan S

3. Calibrate the Scanner

3.1. Precautions and Use

Calibration is the process to ensure the device will scan with the optimal accuracy and scan quality. Each EinScan 3d scanner was factory-tested and achieved, at least, the listed accuracy from the technical specification according to VDI/VDE 2634 standards.

Besides factory tested guarantee of accuracy, to assure high scanning accuracy, each EinScan is also coming with a calibration board for customer calibration. This customer calibration is not required daily often. Only when the first time after scanner and software are installed. Or, when you are in the following situations, you should calibrate the device:


- ◆ When the scanner is used for the first time or after long time without using.
- ◆ When there is strong vibration during the transportation.
- ◆ When alignment mistake or failure frequent appear during the scanning.
- ◆ When scanning data is incomplete and quality is much worse during the scanning.

Note:

1. Calibrate the Scanner twice a week for accurate scanning.
2. Make sure to protect the calibration board and keep it clean, no scratches or stains on the black surface with white circles.
3. The Calibration board is matched to the Device with same Serial Number. Doing the calibration with an incorrect calibration board will fail to generate good scan data or optimum accuracy.
4. Clean with clear water only, do not use alcohol or chemical liquid to clean the calibration board

3.2. Operation

After installation, when you open the software for the first time, it will enter the calibration interface automatically. You can also choose Calibration on the navigation bar to enter calibration process later. If there is no calibration data, click “quit”, the software will prompt “No calibration data, please calibrate”.

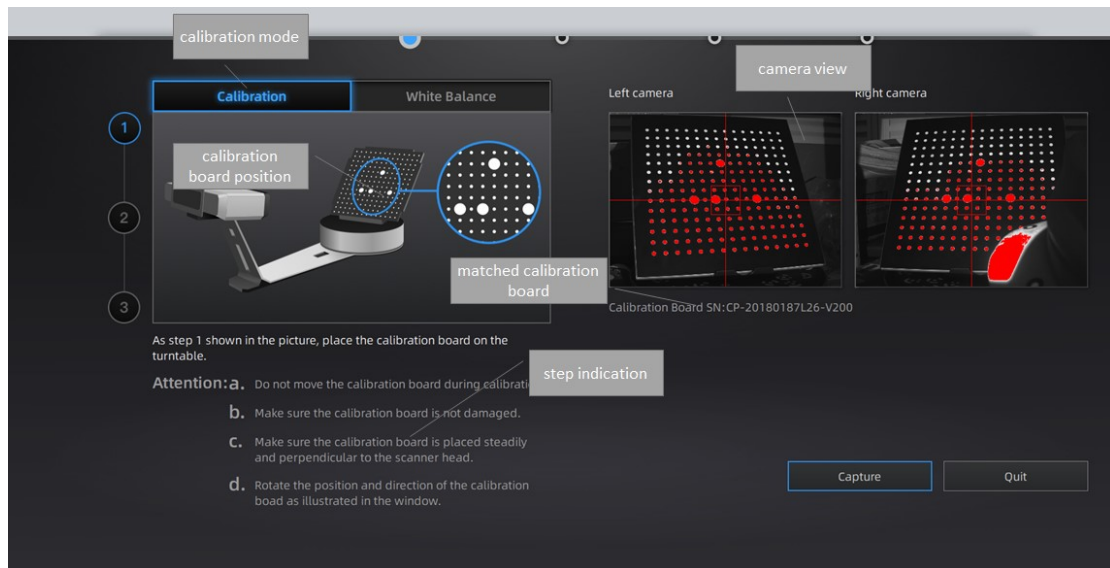


Calibration interface

3.2.1. Calibration

Place calibration panel in different orders for scanner's comprehensive data collection. By collecting calibration panel data, the Scanner gets cameras' precise parameters and uses those parameters to implement precise scanning.


Step 1: Place calibration panel and its bracket at the turntable center. Face calibration panel to scanning head..

Step 2: Click "Capture". The calibration panel will turn a circle. Do not touch calibration panel.

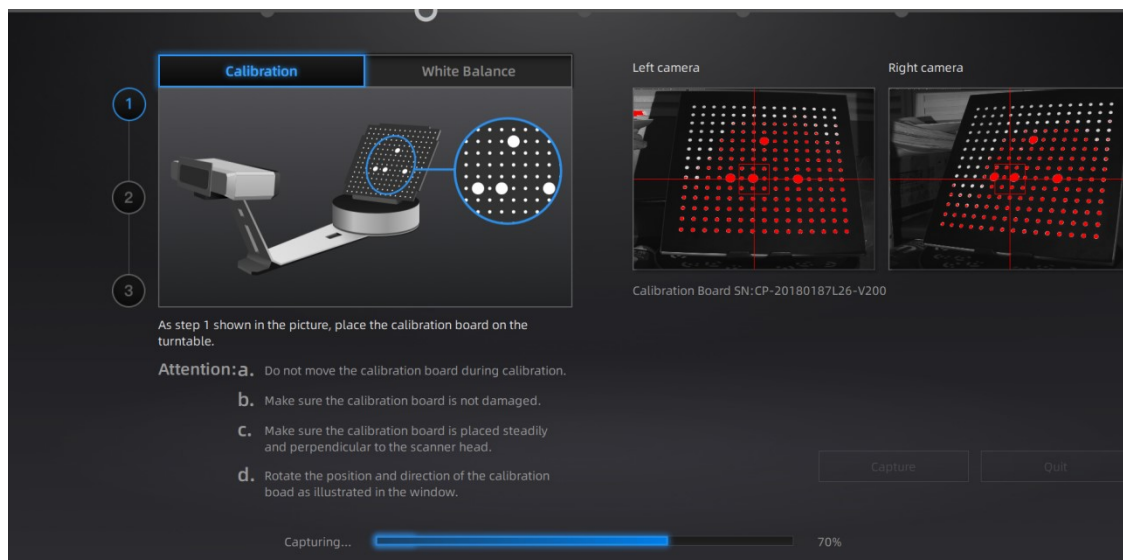


On-screen instruction during calibration step 1


Step 3: Turn calibration panel 90° counterclockwise as guided in software. Move bracket with panel to the turntable right side (until the calibration board white edge is aligned with the yellow line shown on the image).

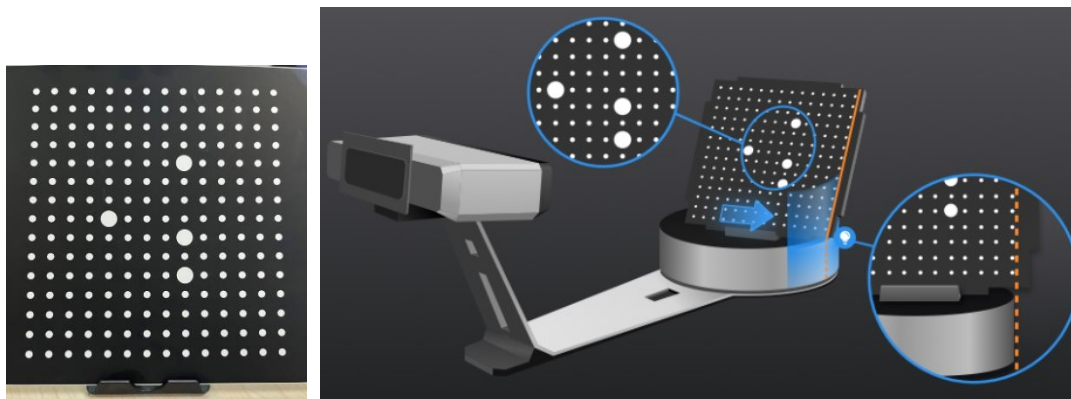

Step 4: Turn calibration panel 90° counterclockwise after step 2 as guided in software. Move bracket with panel to the turntable left side (until the calibration board white edge is aligned with the yellow line shown on the image).

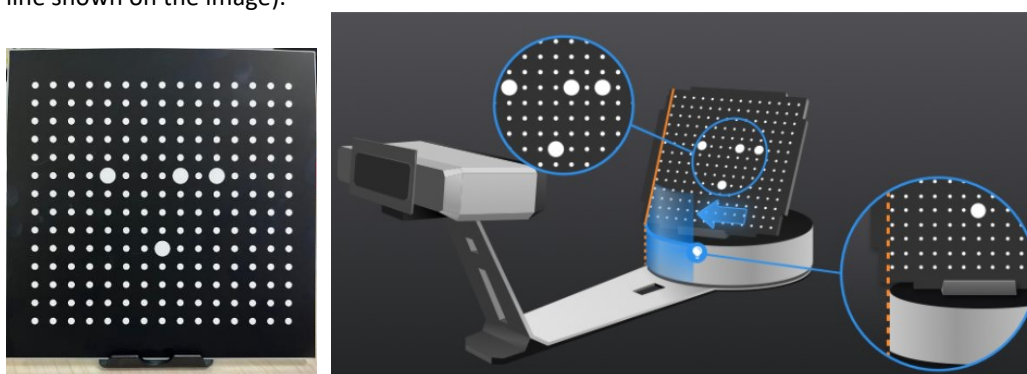


After collecting calibration panel data, the software will calibrate the camera automatically. You will see the result as below. Calibration will take longer or fail if you did not follow all instructions properly. When calibration succeeds, click “Next” to move on to the White Balance as the software indicates.

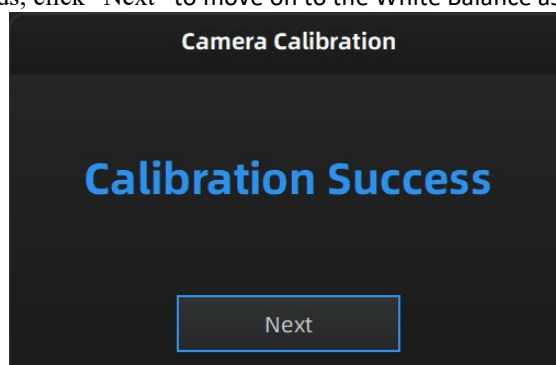

Camera calibration result

If calibration fails, click “Redo calibration” to start the same calibration again from the beginning.

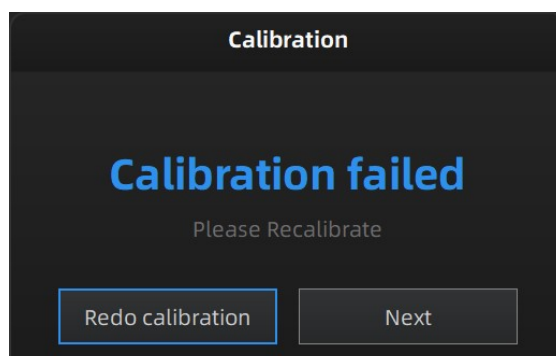


Calibration failed

Click “Next” to perform white balance as the software indicates.

3.2.2. White Balance

To capture an accurate color texture, White Balance calibration should be done every time when the lighting environment is changed.

Place a sheet of white paper as shown below on the calibration plate and click “white balance test”.

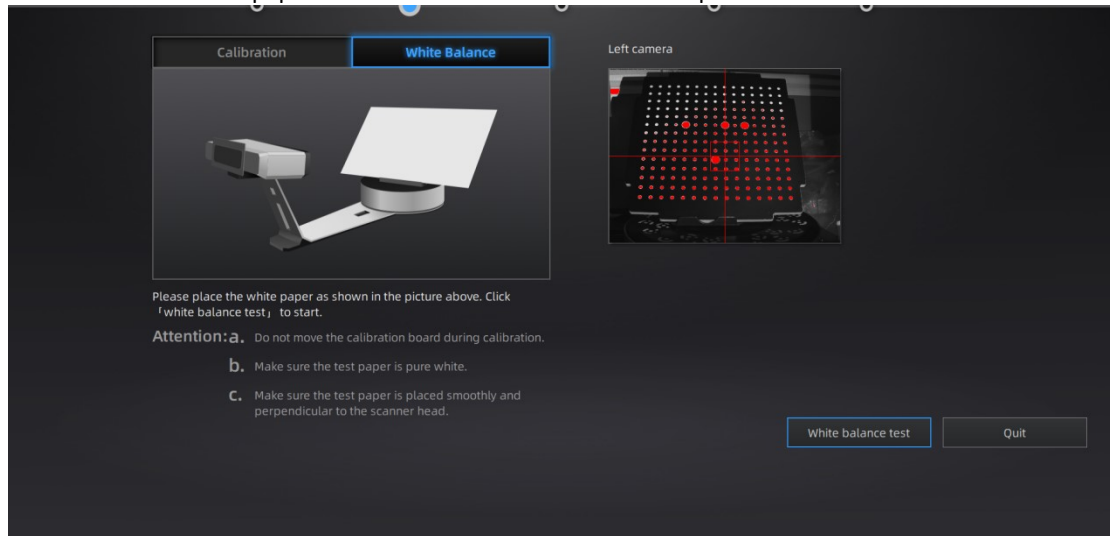


White Balance calibration interface

To guarantee a good texture, the white paper must be kept clean.


If the texture doesn't give you satisfaction, please optimize the lighting environment and redo White balance.

You will see the result as below. Click “Next” to new a scan project.

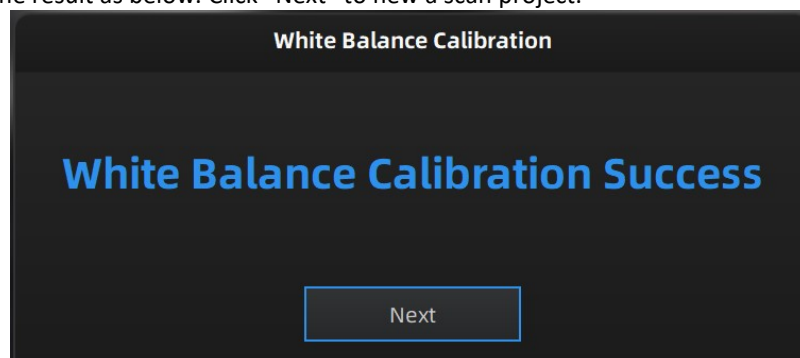

White Balance result


Place a white paper at a proper distance(290mm - 480mm), adjust the brightness according to the camera view, click “white balance test” to start.

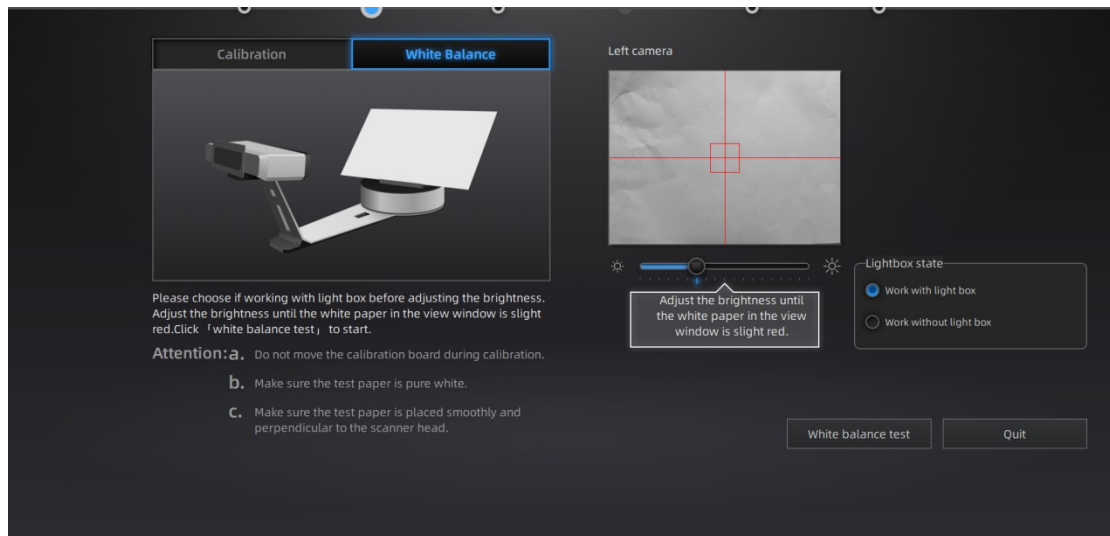

After white balance, check the color of object in the camera view is the same as the real object. If not, adjust the brightness again and re-calibrate; If yes, click “Quit” to exit calibration interface.

Note:

Only devices with Discovery module have light box.

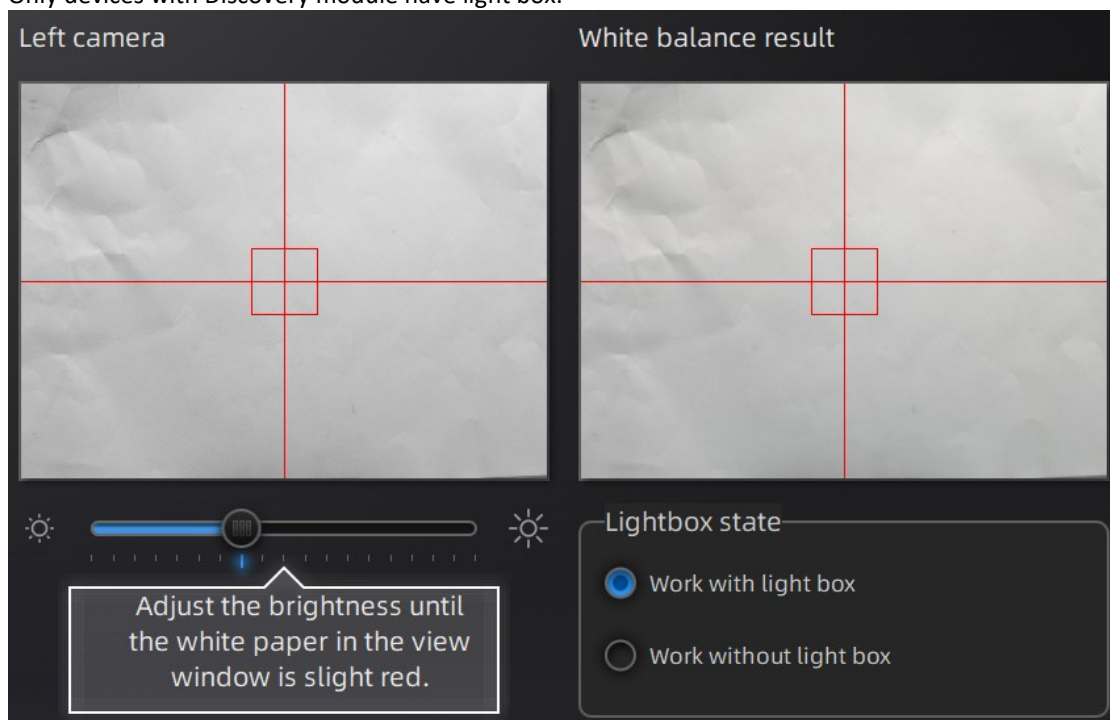

4. Before Scanning


4.1. Object

EXScan S can scan objects from $(30*30*30)\text{mm}^3$ to $(200*200*200)\text{mm}^3$ with turntable or scan objects from $(30*30*30)\text{mm}^3$ to $(700*700*700)\text{mm}^3$ without turntable.

We do not recommend scanning:

- moving or vibrating objects, which cause the shape of object changed during scanning process.
- Soft material object
- lattice structures with many small deep holes

The object needs to be maintained without any changes during scanning.

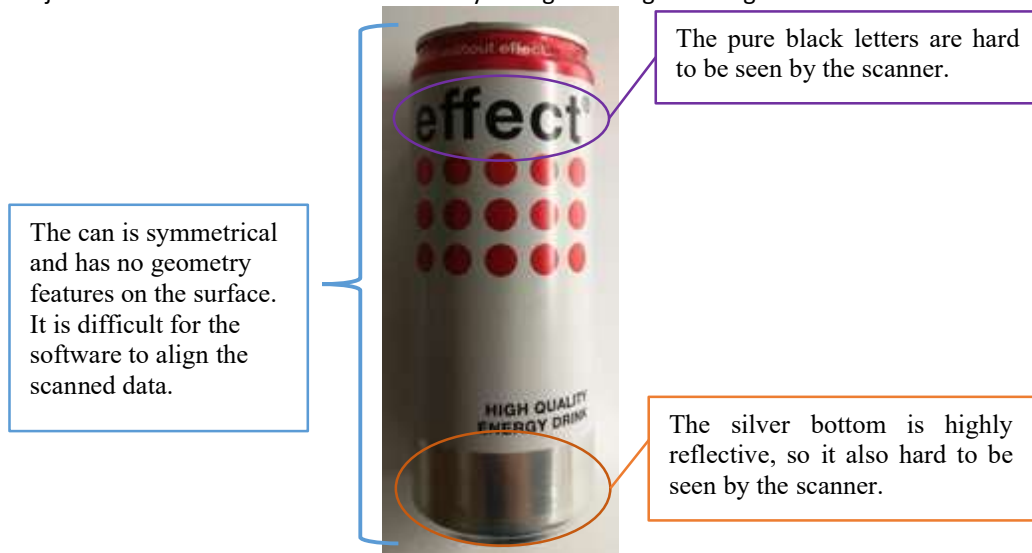


Example of object that is difficult to scan

4.2. Preparation

To align data if geometry features are not sufficient, you need to stick markers or pieces of clay on the surface of scanned objects to create extra “features”.

When you stick markers on the surface of the object, you need to follow the following rules:

- Make sure sticking at least 4 markers in each frame (one scanning field of view). Control the number of markers seen on the camera view.
- Stick markers in a random, non-linear pattern (see example below).
- Markers should be stuck on the flat surface area and keep the marker surface flat.
- Use the markers provided with the device only. Other markers can result bad accuracy or not to be seen.

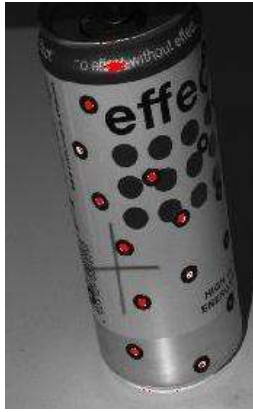

Object with markers


Before scanning transparent, highly reflective and black objects, you should spray white powder on the surface (see example above).

5. Scan

5.1. Before Scanning


5.1.1. Create a Work

Enter the interface of New Work and Open Work. The initial default save location is on the desktop unless the user opts to change it. Click “New Work”, enter the work name, then click ‘Save’ to enter the scan parameters window. Texture scan is only active when you finish the white balance calibration.

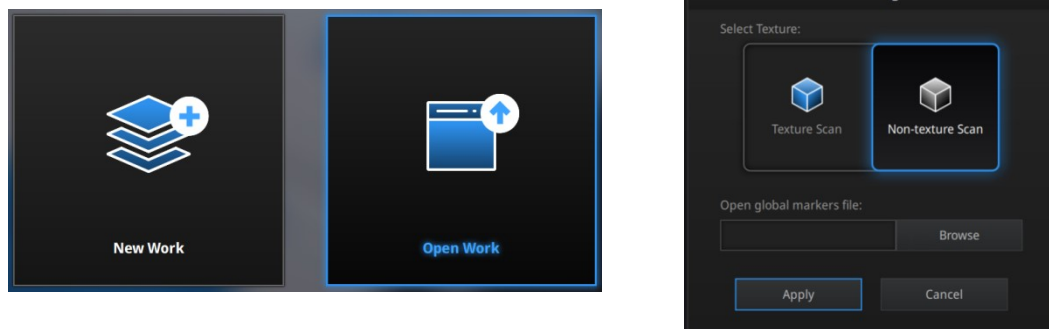


Create a work

In the new project interface with EinScan SP, you have the option to click browse to import a Global Marker File (GMF) as .ASC, .TCT or .P3. Global Marker File is normally captured by a Photogrammetry System to achieve a high accuracy Markers Frame for large object, in which you can scan the object in detail and match the global accuracy of Markers Frame.



Browse to load a GMF (only available for EinScan SP)

Note: When using the global markers file, new markers cannot be scanned. Global markers points can be deleted.



When a project is open, click the **work button** to create or load a new work.

5.1.2. Working Distance

When using a monopod stand for scanning, simply place the object in the center of the turntable. When using a tripod stand for scanning, please ensure that the scanning distance is approximately 380mm.


5.1.3. Adjust Brightness

Click and drag the button to adjust the brightness. The correct brightness setting will depend on the lighting in the environment and the texture of the object.



Drag to adjust the brightness setting

To scan an object with high contrasting texture, such as something white and black, use HDR. Each single scan will take longer to capture.




Turn HDR ON to scan contrasting textures

5.2. Turntable

5.2.1. With/Without Turntable

Create or Import a fixed scan project.

On the top right, Check the box to use the turntable, or Uncheck to not use the turntable.



Fixed scan with turntable

5.2.2. Turntable Steps



Turntable step input

Before scanning, set the turntable steps from 8 to 36. The number shows how many times the turntable will stop in one turn, and the data will get captured at each stop. The default setting, 8 steps, is recommended. You can change the number of steps according to the features of the objects.

Note: Using more turntable steps will help scan more complete data in some angles, but NOT more accurate.

5.2.3. More Turntable Settings



More settings

Click **More Settings** to set turntable speed and turns.


5.2.4. Turntable Speed



Turntable speed

Set to adjust turntable speed. "6" is set by default. Higher value is with higher speed.

5.2.5. Turntable Turn




Turntable turn

Set turntable turns corresponding to turntable step and speed. One turn by default.


One turn: Turntable rotates for one turn.

Half turn: Turntable rotates for half turn.

5.2.6. Alignment Condition

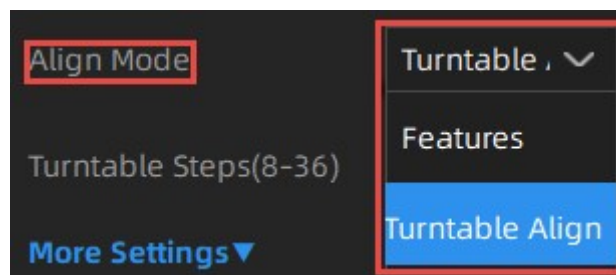


SE

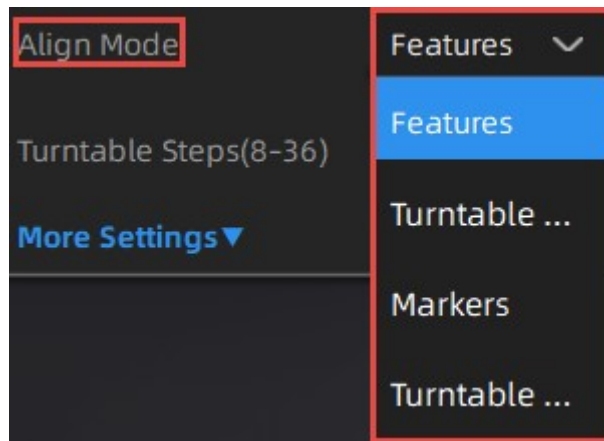

SP

Select an alignment mode condition for the turntable scan.

Note: For EinScan SP, other than alignment mode features displayed above, global markers alignment feature is also available: Open **New Project** interface, import a global markers file. Then global marker feature is displayed (shown below).

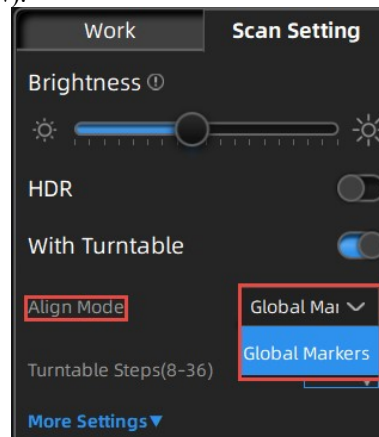

Turntable Alignment

If you do not want to stick marker points on the object you want to scan, and it is too big and covers the coded targets on the turntable, you could choose turntable align.

Working Principle: Align the data with the assistance of turntable.

Note: Need to keep the distance between turntable and scanner the same as it is during calibration; Objects in regular shapes such as sphere and square are not suitable for this mode.

Turntable Coded Target Alignment

Note: The feature of turntable coded target alignment is only available for EinScan SP and EinScan SP V2.

The turntable coded target alignment works as follows: on every step of the turntable, the scanner recognizes common coded targets on the turntable to calculate the new position of the object. At least 4 common targets need to be recognized between 2 neighboring scans.


Note: The object needs to be small without covering the coded targets, put the object on the middle of the turntable, and make sure the object will not move during scanning; If you choose turntable coded target alignment, the scanner head is requested to fix on the tripod to scan.

Feature Alignment

When the distance between turntable and scanner is inconsistent with it is during calibration, feature alignment will be helpful.

Working principle: With feature alignment, after starting scanning, software will capture four data to calibrate. The scans are matched by knowing the center and angle of rotation between successive captures.

Note: Objects in regular shapes such as sphere and square are not suitable for this mode. With feature align, need to make sure the object will not move when turntable rotates. And the objects needs to have enough features for the software to recognize.

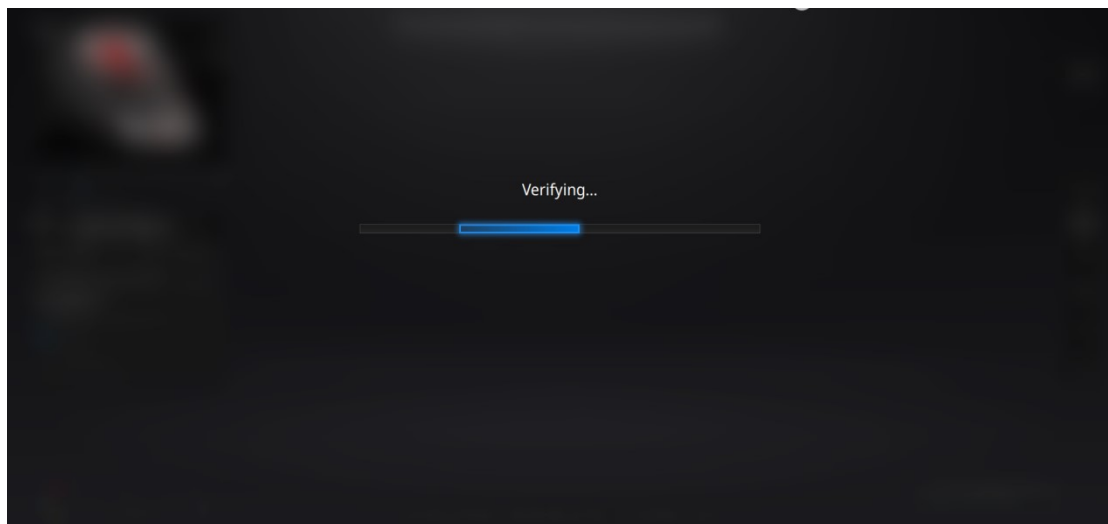

During the “verifying” steps, the software calculates the position of the turntable

Markers Alignment and Global Markers Alignment



Note: The features of markers alignment and global markers alignment are only available for EinScan SP and EinScan SP V2.

Markers alignment is used when the scanner cannot see enough coded targets on the turntable for auto alignment. Markers alignment works in a similar way as turntable coded target alignment; the software matches 2 neighboring scans by recognizing at least 4 common markers.


Global Markers is accessible if a Global Marker File has been loaded during the project creation.

5.3. Scan

5.3.1. Start Scan

	Click the button or press space bar to start scanning
	Click the pause button, and the scanning will pause; Click again to resume scanning.

When the scan is completed the data is automatically saved in the project file. Make sure the relative position does not change during the scan.

	When auto scan mode is scanning, you can click the button to stop the current scan. The current data will be deleted directly.
---	--



Scan interface

Scan interface description

No.	Description
1	Zoom in camera window.
2	Adjust brightness.
3	Real-time information.
4	Scanned data.
5	Guide for mouse operation.
6	Function buttons. From top to bottom, they are: Scan, stop or delete, global optimization, create or import a project, align, save data, show or hide texture, and mesh point cloud data.

Note: Right Click on the camera preview to display the Right camera in the window. You will see the parts shown in the window from right camera. The parts which can be seen by both cameras will be captured.







5.3.2. Edit Scan

After the single scan is completed you can edit the data.

Shift + Left mouse: Select unwanted points, the selected points will turn red, as shown below.



Ctrl + Left mouse: Deselect selected data.



	Delete selected data Click the button or the “DELETE” key on the keyboard to delete selected data.
	Undo You can only undo the most recent deleted data.
	Show/Hide Stripes (for data with color texture only) Click the button to switch the texture option between display and hide.
	Press the space bar on the keyboard to save data and exit the single-scan editing. The edited data is saved in the project file
	Cancel editions on the data
	Delete data click the button to delete current data

If you are not satisfied with current scanning data, or there is not enough overlapping regions or markers between neighboring scans for registration, then change the position of the scanner or the object to scan again.


5.3.3. Global Optimization

	Global optimization Click to optimize and align data.
	Exit Click to cancel the global optimization.



Confirm
Click to confirm and apply global optimization.

After scanning objects, use the feature to optimize global data and align model. For undesired optimization result, you can exit first, and then rescan or edit data.

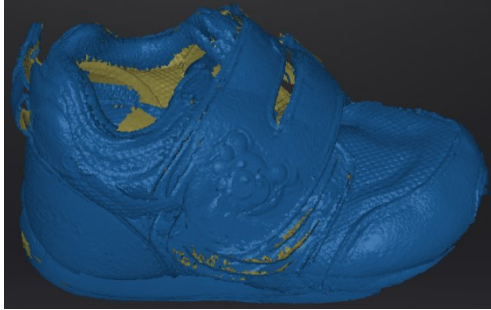


Before global optimization



After global optimization

6. Project Group


You are able to edit, manually align, rename, or save the scan project in the project group list.

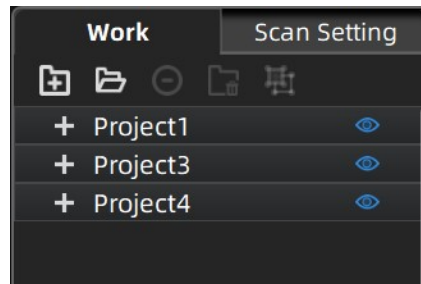

Project tree

6.1. Create/Import Projects

When the scan data is saved, you can create new projects with more scans, or import the saved projects and manage all projects on the project tree.

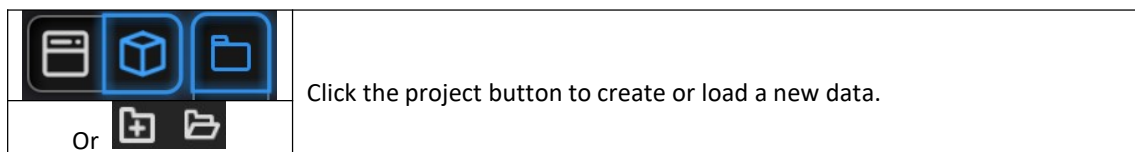

Click on the project tree or on the **project button** create a new project or import a project into the work.

Imported data will be copied in the work folder and appear on the project tree

New project will create a new entry in the project tree and a new project file in the work folder

6.2. Current Projects

The last loaded project is the Current project, new data will be added and align with the current project. The current project is the last listed on the project tree.

Reopen a previous project to make it as the current project.

6.3. Rename a Project



Right click on the project on the tree to rename it. The new name will be updated in the work folder.



Rename projects

In case of name interference in the work folder when load a project, the loaded project will be automatically renamed: "Name" → "Name_1".

6.4. Remove/Delete

	Remove the project
	Delete the selected data, group(s) or project(s)


Select one or many projects Click **remove** to remove the project(s) from the project tree, but not from the work folder.

Click **Delete** or right click and delete to delete the selected data, group(s) or project(s) from the project tree and the work folder.

If you remove or delete the current project the last project will reload and become the new current project.

Note: Delete only affects the data in the work. If the project is imported from other work, only the created copy is deleted.

6.5. Create/Split a Group

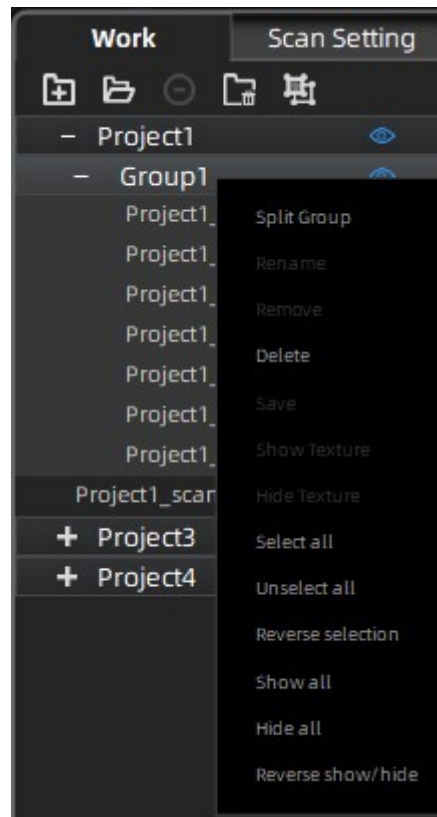

Left mouse: Select data in the data list or on the scanned model.

Shift/Ctrl + Left mouse: Multi-select in the data list.

	Create or split group.
	Delete the selected data.
	Hide or display data.

After creating the group, all the selected data belong to it. Right-click the group or data to view drop-down menu.

Note:

The data captured by turntable scan mode will belong to one group by default. Groups could be manually aligned after being deleted or split. You could left-click the scan model to select data after hiding texture.


6.6. Edit Data


Double click on a project, group or a scan, to enter the edition mode. The edition are applied to the selected data only. Modifications will not affect the rest of the data.

Shift + left mouse: select data on the 3d view, and enter the edition mode. the edition are applied on the visible data only.

6.7. Alignment

Within a project, if you use markers, the data of a project will automatically align with the marker positions. If not, an automatic alignment will be calculated with a best-fit of the single scan to the previous scans of the project according to the geometric features. If the object is not with enough geometric features, you can use manual alignment.

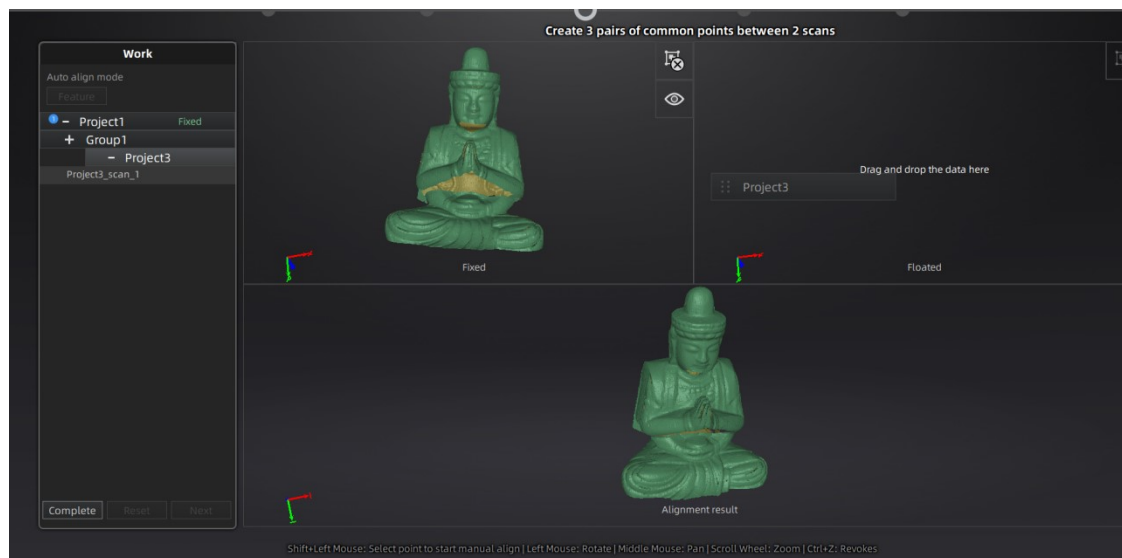

	Click the button to open the Manual Alignment interface
---	---



Drag and drop single scan, group or project to the float and fixed window

Single scan, group or project can be dropped into both windows. Scans in the group or are not allowed, split the group first.


Manual alignment can be used between projects, load the full projects on the float and fixed window. A single data cannot be aligned with another project

	click to remove the scan, group or project from fixed or float window
	Texture visible or invisible (color pack only)

➤ Manual Align

SHIFT + click left mouse button to select at least 3 non-collinear corresponding points in the 3D preview windows for Manual Alignment, as shown below.

Ctrl+Z: cancel last point picked

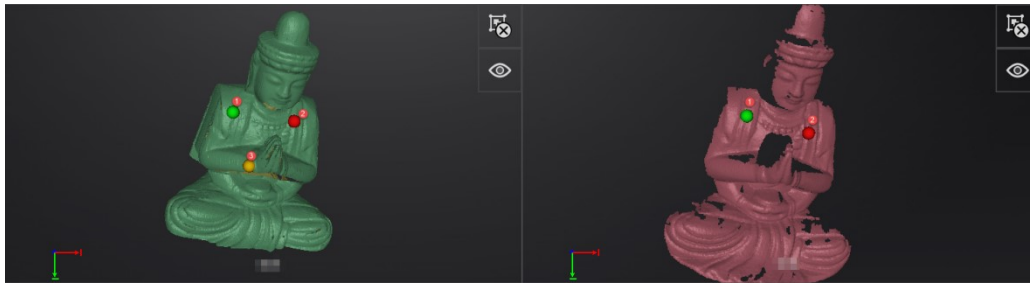

Select 3 points to align the data


How it works: The software calculates the best fit alignment from the picked points, and refine the alignment by best fit of all the points of the floating to the points of the fixed.

➤ **Auto-alignment**

After dragging the data into fixed and floated windows, click the feature alignment button on the left, then the data will be automatically aligned according to features.

After data are aligned the blue number represent the alignment reference.

The floated data is transferred to the reference of the fixed. it is recommended to keep data with the same reference into a same group.

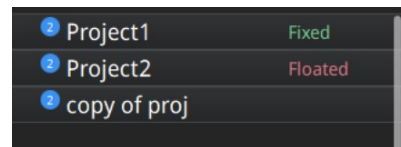

Alignment reference


Click **Complete** to validate and leave the Alignment interface

Click **Reset** to cancel all alignments done in this session

Click **Next** to validate the alignment and continue to use the Alignment interface


7. Mesh

7.1. Create Mesh (Watertight/Unwatertight)




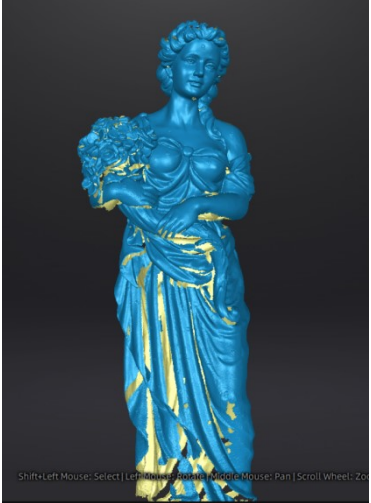


When scanning and editing are completed, click " Global Optimization", then click to create mesh. Two types of mesh are available: Watertight and Unwatertight.

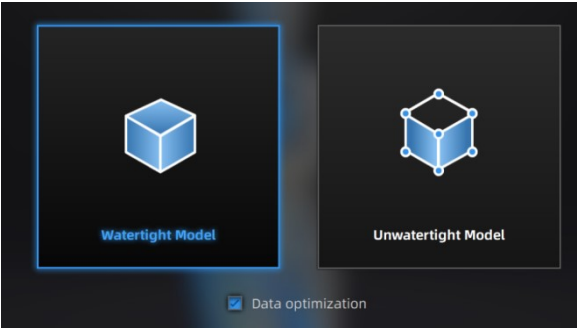- If there are non-texture projects, there will be a data optimization option. After clicking it, the amount of triangles will be optimized in less than 2,500,000 triangles.
- If the projects are all with texture, the data optimization option will be unavailable. The software will simplify the data by default.



Mesh Mode

Watertight		Unwatertight	
			
All holes will be filled automatically. The data can directly be 3D printed.		Unclosed model stays the way it is scanned. Processing time is quicker than Watertight.	

TEXTURE WATERTIGHT

The texture capture is separate from the 3d data capture. If the texture has been captured, it will still be displayed on areas where holes are filled in the mesh processing. If the texture is missing, the corresponding mesh data will be in black.



This region were missing in the scanning, and the texture can't match the original texture.

7.2. Edit Mesh

The mesh can be edited: Select/delete, Hole filling, Sharpen, Smooth, Simplification, Multiview.

MESH SELECT/DELETE

Press **Shift + Left mouse** to select data and enter the selection menu

CTRL+ Left mouse: Deselect a selected region

	<p>Edit buttons:</p> <ul style="list-style-type: none"> ① Deselect ② Revert ③ Delete ④ Undo ⑤ Select Trough ⑥ Select Visible ⑦ Hide/Show color 	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Select Visible to select data on the front view only</p> <p>Select Through to select data all though</p> </div> </div>
--	--	---

	<p>Click End button to return to the post-processing menu.</p>
	<p>Click Revoke, to cancel and return to the post-processing menu.</p>


7.3. Fill Holes

When selecting meshing in unwatertight, the 3d model will keep the missing scanned regions as holes.




You can click  use the hole filling tools.




Click  for **Manual hole filling**. The hole edges are displayed green, and get red after picking. Click the edge of the hole to fill it.



Click  for **Marker filling**. Input the radius of the marker used, all holes generated by markers will be automatically filled. This function is only applicable to the meshed scan data with markers, while it is not available for imported data.




Click  for **Auto filling**. Input the perimeter of the biggest hole to be filled. Less than 100mm is recommended. This function will fill every hole with a smaller perimeter than the number input.

The hole edges are displayed green.


Choose **Curvature**, **Tangent** or **Flat** before picking a hole.


- **FLAT** calculates the solution for the hole filling considering the point position on the boundary.
- **TANGENT** calculates the solution considering the point position and the normal of the last row of triangles forming the boundary.
- **CURVATURE** calculates the solution considering the point position and the normal of the 2 last rows of triangles forming the boundary.

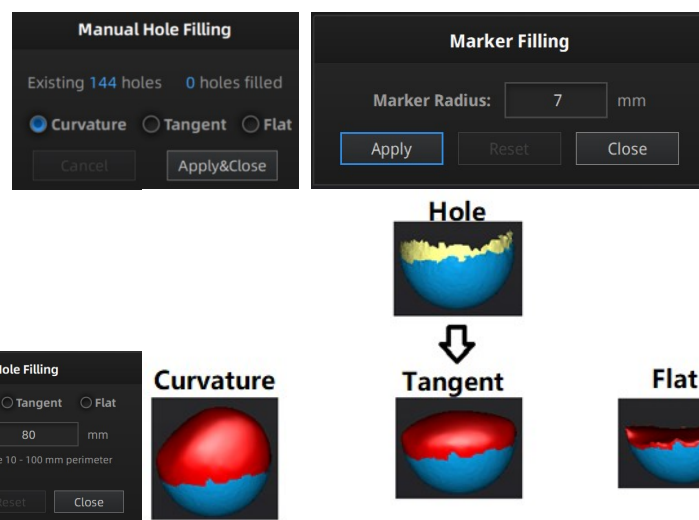


Effect of Curvature, Tangent or Flat

7.4. Sharpen


Click  Sharpen button to display the sharpen menu, click again to close the menu.

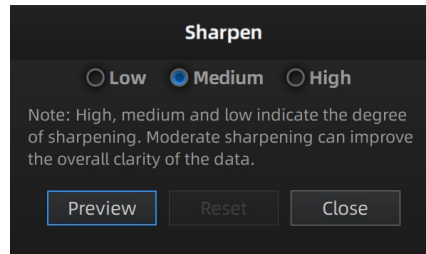


Sharpen

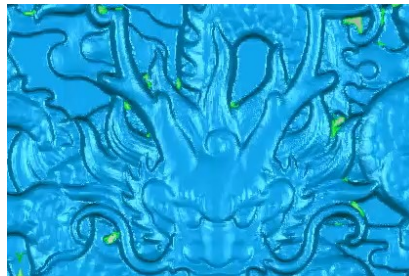


Original

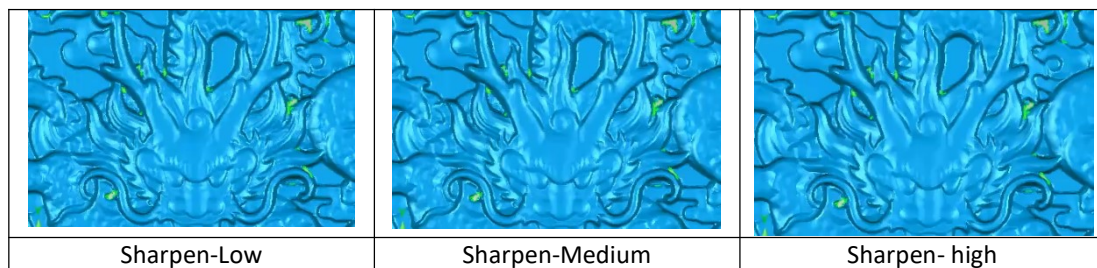


7.5. Smooth

Click  Smooth button to display the smooth menu, click again to close the menu.


Smooth the possible noise on the surface of the scan data. It might remove some small details or smooth some sharp edges at the same time. The example of before and after smoothing is shown below. Run 2 times, data will be smoothed twice.

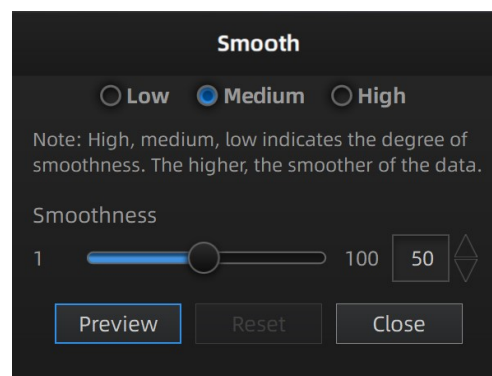

smooth menu

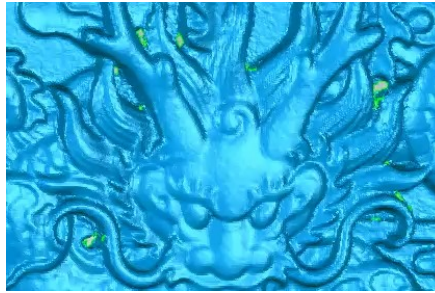


Original

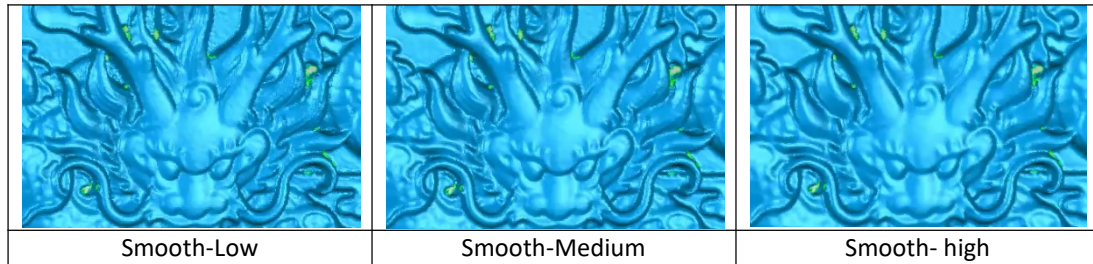


7.6. Simplify




Click  Data simplification button to display the simplification menu.

After simplification, the polygon numbers, file size and level of detail of data will be reduced accordingly. Set the ratio from 1 to 100, the default is 100%.

The comparison of detail between before simplification and after simplification (at 30% simplify proportion).

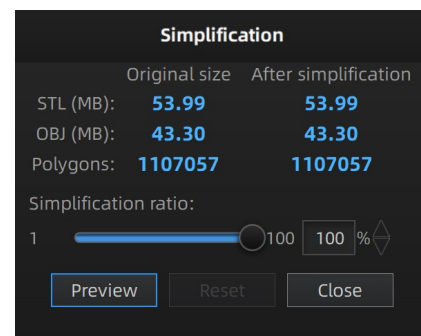


simplification menu

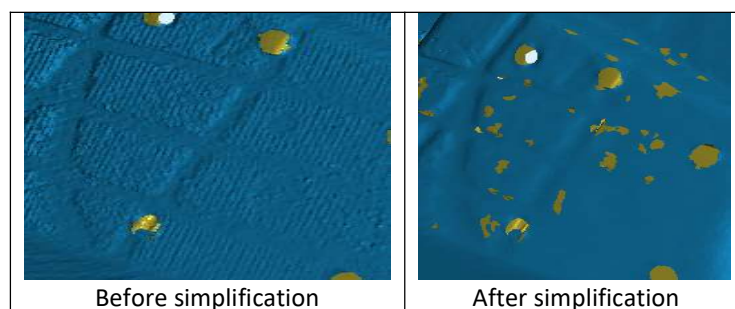

7.7. Zoom



Click  to scale the volume of scanned data, while the number of triangles, the level of detail of the scanned data and the file size of data will not be actually changed.

The default is 100, indicating no zoom.

Zoom		
	Original size(mm)	After zooming(mm)
Length	78.36	78.36
Width	42.01	42.01
Height	79.70	79.70
Scaling ratio	<input type="text" value="100"/>	%
<div><button>Preview</button><button>Reset</button><button>Close</button></div>		

7.8. Remap Texture




Click  Texture Remapping to display the Texture menu

Mesh edition of simplification, hole filling on texture scanned data will affect the texture render. By doing the texture remapping, the texture information will be reapplied on the mesh.


Texture remapping is accessible before saving the data.

Choose “**Texture Layout Optimization**” (TLO) to create an optimized arrangement for the texture file. It will make the texture manual editing much more convenient if you are going to process the texture in a 3rd party software.

This option has no effect on the texture itself.

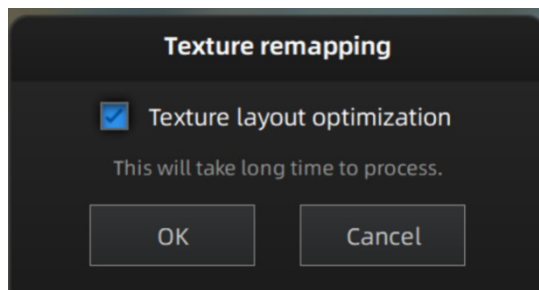

Texture Layout Optimization

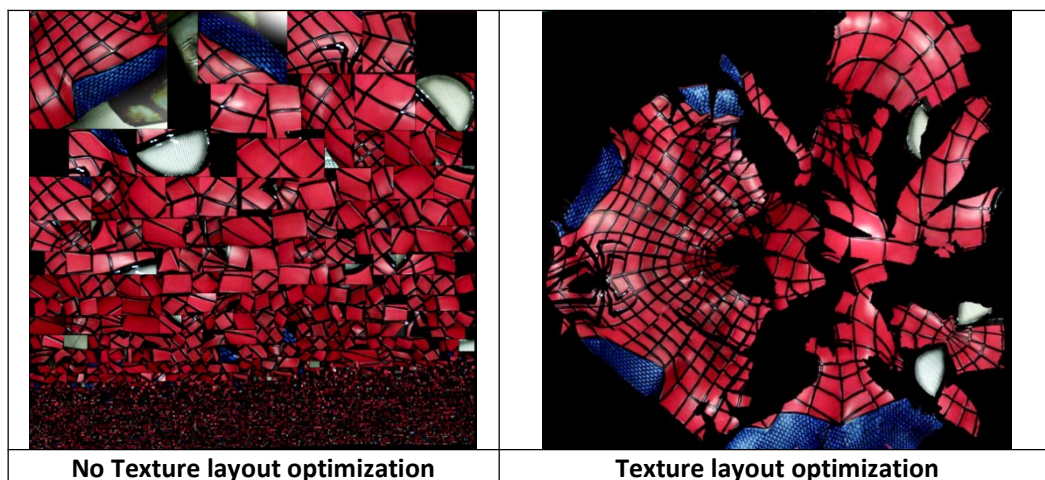



Notes:


1. TLO requires a longer time to compute
2. TLO is used only with OBJ output
3. TLO result is more convenient for texture manual editing

8. Export Data

8.1. Data Formats

Click  to export the data.


You can click  to choose a save folder. In the dialog that opens, input the file name. Select one of the formats below. By default, the saving path is the project folder, the file name is "Scan data", and the format is .stl.

Or click  to export the data to EXModel.


Format	Texture	Data type	Saves as	Recommended for
ASC (separated) (scan mode only)	No	Separated point-clouds, with calculated alignment	scan_0.asc scan_1.asc scan_2.asc etc...	<ul style="list-style-type: none">◆ Inspection◆ Fast export (no post-processing needed)◆ Complex data to post process in another software
ASC (whole)	No	optimized point-cloud	scan.asc	<ul style="list-style-type: none">◆ Inspection◆ Fast export (no post-processing needed in hand-held mode)◆ Large data to post process in another software◆ Complex data to post process in another software
STL	No	Mesh	scan.stl	<ul style="list-style-type: none">◆ 3D printing (watertight mesh data)◆ Reverse Engineering◆ Compatibility with most mesh editing software
OBJ	Yes (separated)	Mesh, Texture & Matching file	scan.obj scan.jpg scan.mtl	<ul style="list-style-type: none">◆ Artistic applications◆ 3D rendering◆ Compatibility with most mesh editing software
PLY	Yes	Mesh	scan.ply	<ul style="list-style-type: none">◆ Low storage◆ Easy texture editing
3MF	Yes	Mesh	scan.3mf	<ul style="list-style-type: none">◆ Low storage◆ Compatibility with Microsoft paint3d
P3	No	Marker position	scan.p3	<ul style="list-style-type: none">◆ Global Marker File in EXScan S software◆ Measurement of the marker position

8.2. Measurement


After meshing, the Measurement menu will be available on the top. You can also click Measurement on the navigation bar, and Click **Open file**, a STL or OBJ file can be imported to edit.

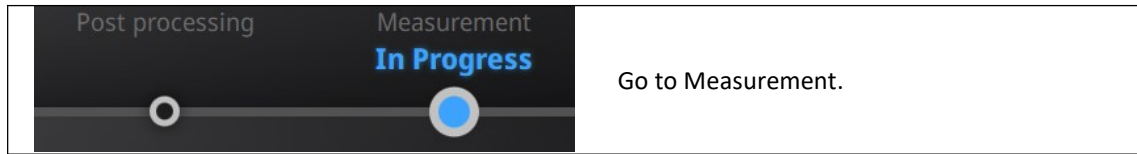


8.2.1. Create Feature



Click the Feature button to display the menu, click again to close the menu.

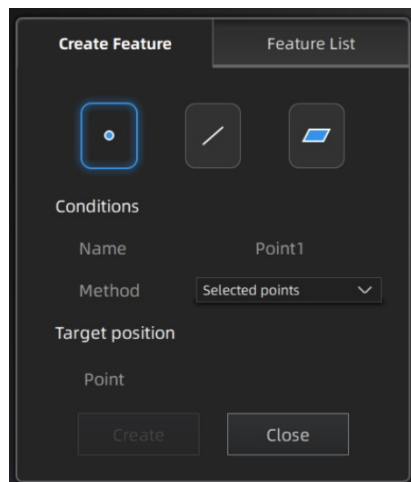

Feature menu

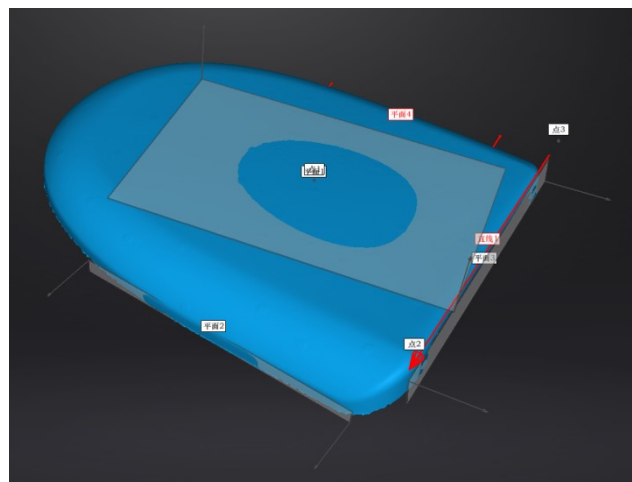




Display of Features

Click on the corresponding icon to create points, lines, planes.

Then select the creation method and follow the instructions, click “Create” to generate, or “Close” to cancel and close the window

The features created displaying in gray, the selected features are in red. In the feature list, click “delete button” to remove (Delete action cannot undo).

Feature	Creation method	Requirement	Description
Point	Selected		● Click on the data to select a point.

	Points		<ul style="list-style-type: none"> Click create to create a point.
	Line-Plane Interface	Line and Plane should be created in advanced	<ul style="list-style-type: none"> Click on the created line, or select it on the dropdown. Click on the created plane, or select it on the dropdown. <p>The point generated is the intersection between the non-parallel line and plane.</p> <p>Feature creation failed! Error code 9: the line is parallel to the plane.</p>
Line 	Point-Point		<ul style="list-style-type: none"> Pick 2 points. Click on the data to select a point or click on a feature point previously created. <p>In the Choice list select one of the point to redo it The line generated is define as point From to point to point.</p>
	Plane-Plane Intersection	2 Planes should be created in advanced	<ul style="list-style-type: none"> Click on the plane previously created, or select it on the dropdown, repeat for the second plane. The created line is the intersection between the 2 non-parallel planes. <p>Feature creation failed! Error code 1: the planes are parallel.</p>
Plane 	3 Points Fit		<ul style="list-style-type: none"> The plane is generated by 3 points not co-linear. Click on the data to select one point or click on a previous created feature point. In the Choice list select one of the point to reselect it. <p>Feature creation failed! Error code 6= the points selected are co-linear.</p>
	Point-Line Fit	Line should be created in advanced	<ul style="list-style-type: none"> The plane generated includes the point and the line (The line should be created in advanced). Click on the line previously created, or select it from the drop-down. Click on the data to select a point or click on a feature point previously created. In the Choice list select one of the element to reselect it. <p>Feature creation failed! Error code 6= the point selected belongs to the line.</p>
	Best Fit		<ul style="list-style-type: none"> Press Shift+ LMB to select an area, press ctrl+ LMB to unselect. The plane generated is the position with the smallest deviation from the selected area. <p>Recommend method to create plane.</p>

8.2.2. Movement


Use this mode to modify the alignment of the data to the global coordinate. This action is useful for post processing or reverse engineering.

The transformations do not affect the shape and size.



Click the Movement button to display the menu, click again to close the menu.

Exact movement

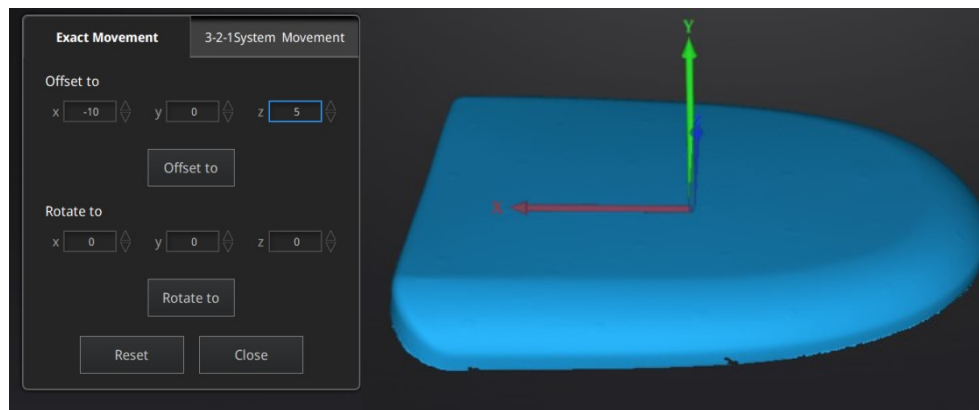

Exact Movement Menu

Enter the value in mm and degrees, click **Apply** to match the data origin to the input coordinate and orientation


The arrows represent the global coordinate system, Red=X+, Green=Y+, Blue=Z+

Click **Reset** to cancel the transformation to original position

Click **OK** to confirm the transformation

Tips:

- Start from data reposition (offset to 0,0,0)
- Edit rotations prior to transformation
- Change the view normal to a reference plane to change the corresponding angle

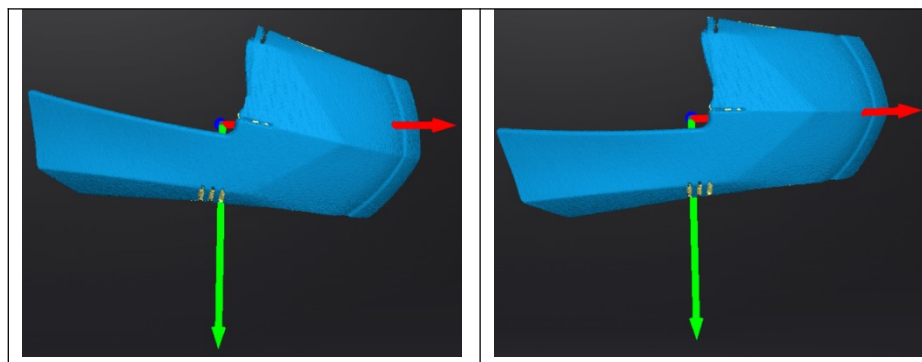


3-2-1 Movement

Prior to 3-2-1 movement, the creation of a plane, line not normal to the plane and point are required.

3-2-1 movement (plane-line-point alignment) aligns the data by deletion of the Degrees of Freedom.


The arrows represent the global coordinate system, Red=X+, Green=Y+, Blue=Z+

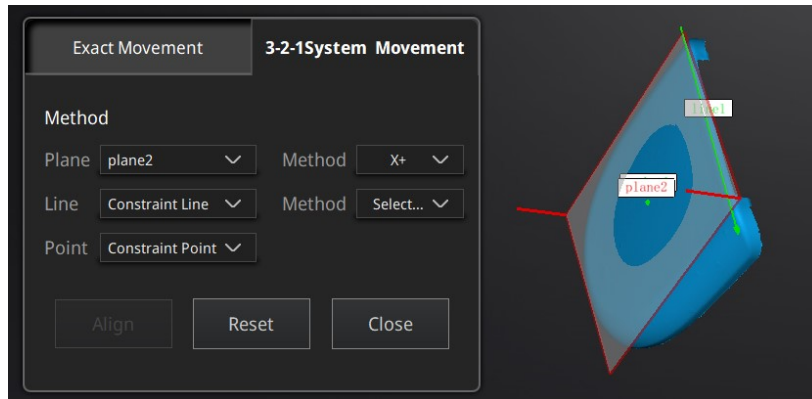

3-2-1 Movement menu

- Select a Plane in the drop-down menu, match it to the first axis in the Method drop-down. The arrows on the corners of the plane represent the plane positive direction. The normal vector of the plane will match the axis direction.
- Select a Line in the drop-down menu, match it to the first axis in the Method drop-down. Beware the direction of the line to match it to the + or - axis. The projection of the line to the first plane will be parallel to the corresponding axis
- Select a Point in the drop-down menu. The data will be translated to match the point with the origin point (coordinate 0,0,0)

Click **Align** to perform the transformation

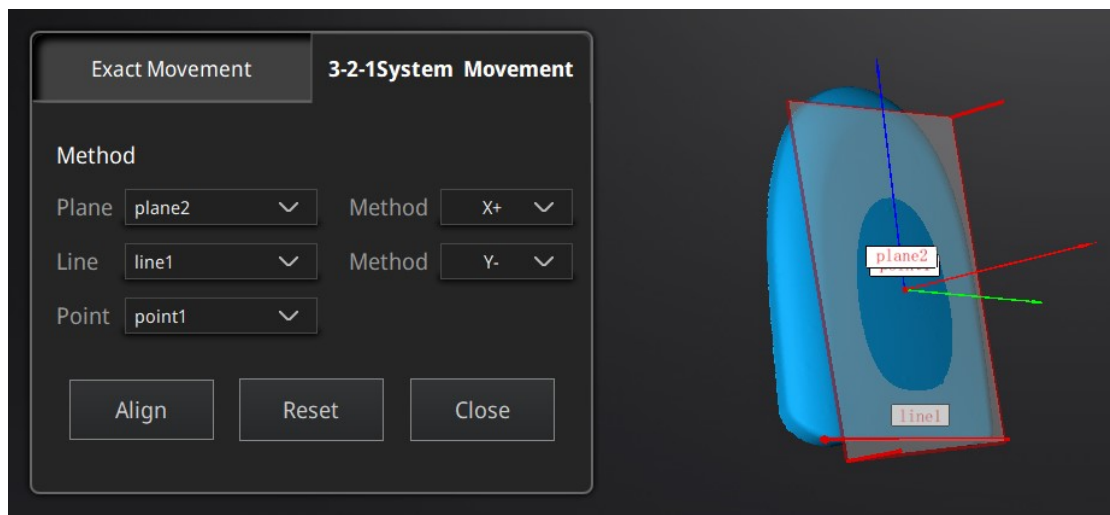

Data after 3-2-1 movement

Click **Reset** to cancel

Click **Apply** to confirm the transformation.


8.2.3. Measurement



Click  Measurement button to display the menu, click again to close the menu

DISTANCE

This tool calculates the distance between two points belonging to the surface of the data. Click on the data to pick the first and second point, select one of the two points to redo it.

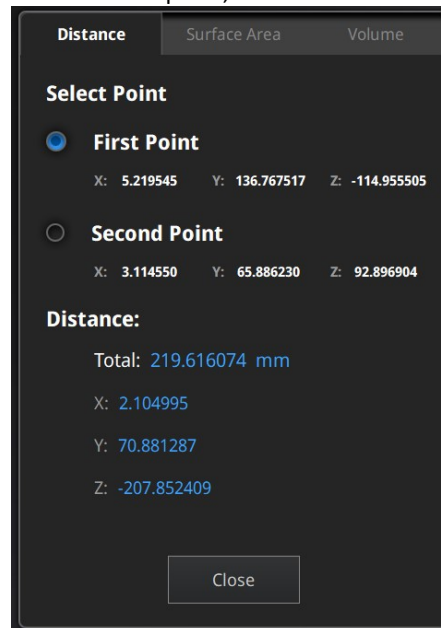

Distance menu

Total is the 3D distance, X, Y and Z are the projection of the segment to the respective planes.


SURFACE AREA

Press **Shift+LMB** to select an area, press **ctrl+LMB** to unselect.

Ctrl+A to select all.

Click **Calculate** to display the Area value of the selected data in mm²

Redo the selection and click calculate again to update

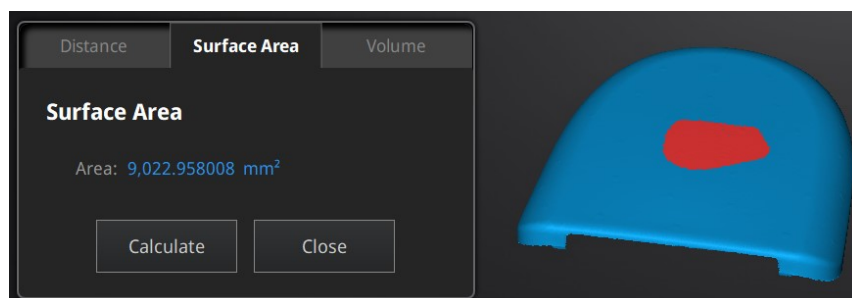


Surface Area menu

VOLUME


This tool calculates the volume contains in a [watertight](#) mesh.

It returns the volume in mm³ and the coordinates of the smallest box, parallel to the global coordinates, containing all the data.

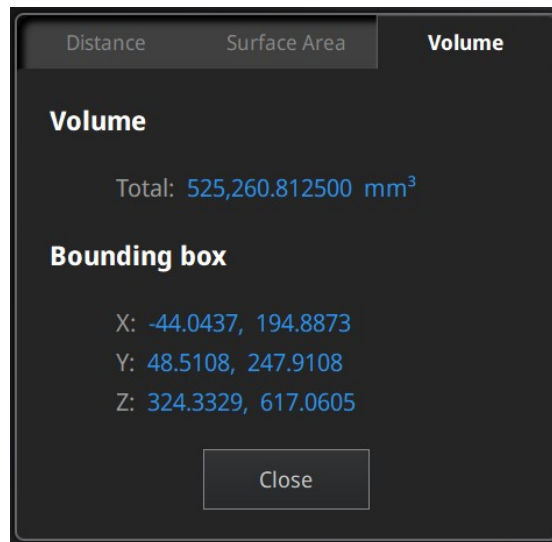

Volume menu


Prior to the calculation make sure the file is [watertight](#) (no holes).

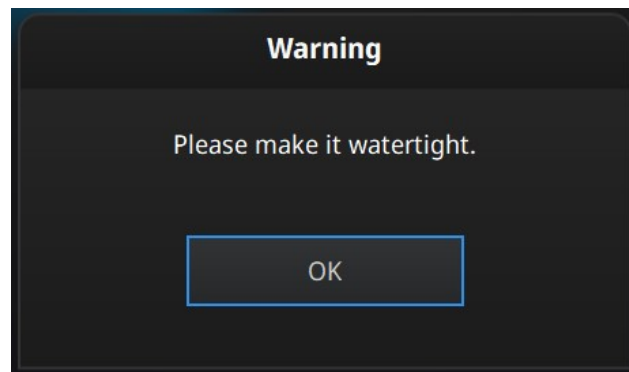

File not watertight alert

9. Share Data



Click  after mesh to share data to Sketchfab, it will show the dialog as below. A model title, username and user password are required. Register and view the shared model at <http://sketchfab.com>.

Notes:

Data is saved as .STL does NOT contain texture

Sketchfab Upload

Share the current model to Sketchfab.com.
All fields marked with an * are mandatory.
[Click here to register a free Sketchfab account.](#)

Model Title: *

Description:


Tags (separated by space):

Sketchfab username: *

Sketchfab password: *

10. Third-party Software



Click  after mesh to import the mesh to a third-party software.



GEOMAGIC ESSENTIALS and



SOLID EDGE SHINING 3D EDITION can be started.


Notes:

1. The third-party software should be installed and activated in advanced.
2. Solid Edge SHINING 3D Edition is included in EinScan SP/EinScan SP V2.
3. Geomagic Essentials is not included in the scanner. Please contact us if you are interested to buy.
4. Both software needs to obtain the license for an online activation.


GEOMAGIC ESSENTIALS is the essential bridge between 3d scanning and design. Once 3d scan is finished in EinScan 3d scanning software-Exscan Pro, take the 3d scan data to Geomagic essentials, extract the feature you want, and create solid models and complex profiles to your CAD design environment.

Solid Edge is a design tool from SIEMENS PLM Software. Partnered with SIEMENS PLM Software, EinScan users is able to use Solid Edge SHINING 3D Edition, which includes reverse engineering, with CAD functions in one platform.

11. Preview Model



Double click the short-cut  on the desktop. Drag files into the window for preview. Manipulate the data with the same control as EXScan software.

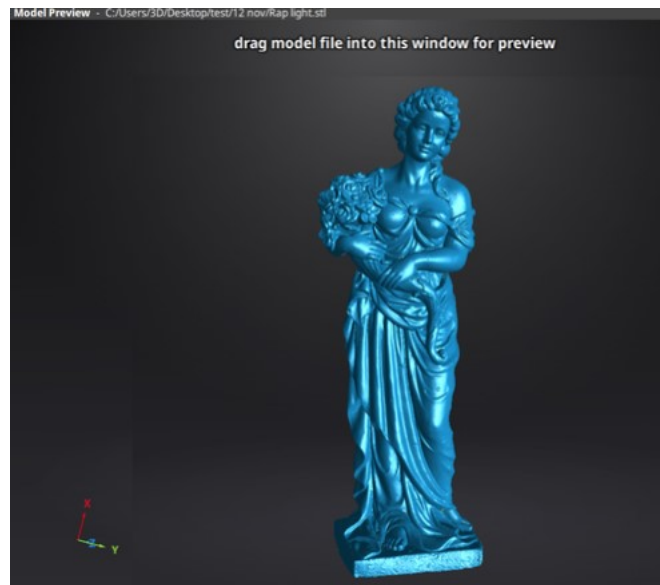

Model Preview

STL, OBJ, PLY, ASC, or 3MF can be loaded, files from 3rd party software might fail to be loaded. In this case we recommend Meshlab, a free mesh software editor, or upload to sketchfab.

Note:

To load a OBJ textured file make sure to have the MTL and JPG files with the same name and in the same folder than the OBJ.

12. Others

12.1. FAQ

1. What if no scan data when the turntable has rotated one circle?

Solution: Please make sure that the object won't block the mark points on the turntable. Or, there will be no fringe pattern, while turntable will be still rotating. If the align mode is mark point, please make sure that the marks on the turntable are covered, so as not to affect the scanning. Make sure that in each single scan area has at least 4 points.

2. What if the merging fails without mark points when the turntable has rotated several circles or when it is under fixed scan mode?

Solution: Try to make sure there are at least 1/3 overlap between the current scan area and the previous scan area and the object surface should be featured. For objects which are symmetric and without rich features, using mark points or manual merger is recommended.

3. How to scan objects in transparent, semi-transparent or black?

Solution: Scan before spraying on the surface.

4. Under auto scan mode, if the turntable is not moving, but with a humming sound, how to solve?

Solution: Disconnect power line and connect again in few seconds.


12.2. Safety Precautions

- Keep well-ventilation. Environment temperature is suggested to be 0°C ~40°C, and do not use the device under an environment with flammable or corrosive gases or another similar environment.
- If the device could not function correctly, fixing the device by opening it by yourself is not allowed. The device shall be repaired by professional technicians or under their instruction.
- You should send the device to facilities with qualification for recycling it instead of dropping into the household garbage when it is scrapped.

13. Support and Contact


13.1. Submit a Ticket

Sign up in SHINING 3D Support Platform support.einscan.com to submit a ticket.
Or send your email directly to einscan_support@shining3d.com

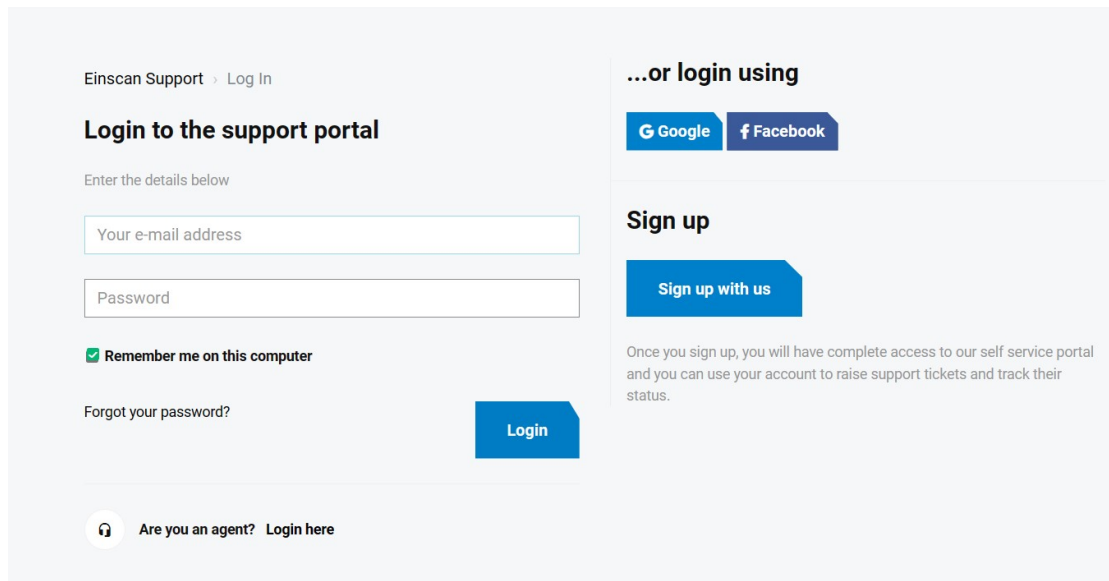

The screenshot shows the Einscan Support login and sign-up interface. On the left, under the heading "Login to the support portal", there are input fields for "Your e-mail address" and "Password". Below these is a checkbox labeled "Remember me on this computer" which is checked. A link "Forgot your password?" is present. A blue "Login" button is at the bottom right of the login section. On the right, under the heading "...or login using", there are buttons for "Google" and "Facebook". Below that, under the heading "Sign up", there is a blue button labeled "Sign up with us". A paragraph of text explains that signing up provides access to a self-service portal for raising tickets and tracking status. At the bottom left, there is a link "Are you an agent? Login here" with a headset icon.

When log in successfully, you can submit a ticket here.

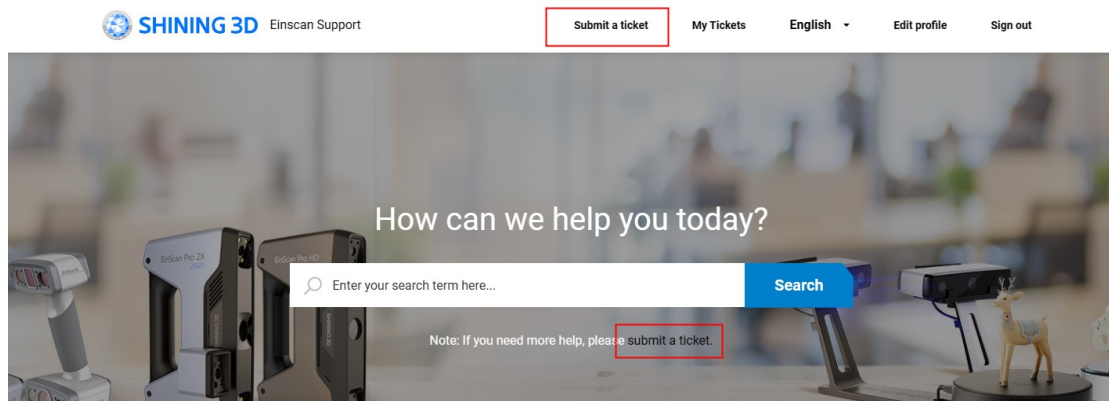

13.2. Contact Us

By email: einscan_support@shining3d.com

Facebook Group: EinScan Experts

SHINING 3D Offices:

APAC Region & Headquarters

SHINING 3D Tech. Co., Ltd.

Hangzhou, China

Phone: +86 571 82999050

Add: No. 1398, Xiangbin Road, Wenyan, Xiaoshan, Hangzhou, Zhejiang, China, 311258

EMEA Region

SHINING 3D Technology GmbH.

Stuttgart, Germany

Phone: +49 711 28444089

Add: Breitwiesenstraße 28, 70565, Stuttgart, Germany

Americas Region

SHINING 3D Technology Inc.

San Leandro, United States

Phone: +1415 259 4787

Add: 2450 Alvarado St #7, San Leandro, CA 94577